



Master Part List – SY250




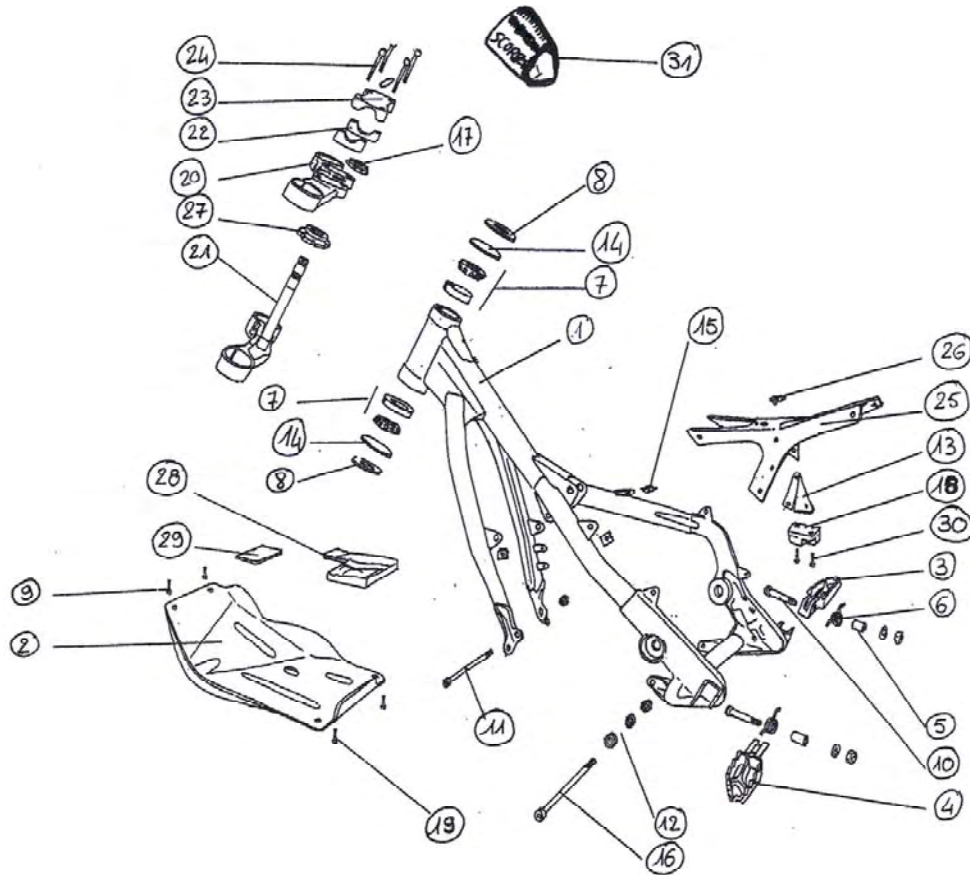


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	1015	Frame	1	1	1		1	1
	-	1017	Frame				1		
2	-	1021	Guard, engine	1	1	1	1	1	1
3	-	1044	Foot Rest, right side	1	1	1			
	-	1045	Foot Rest, right side				1		
	-	S1A-20202-00-00	Foot Rest, right side steel					1	1
4	-	1054	Foot Rest, left side	1	1	1			
	-	1055	Foot Rest, left side				1		
	-	S1A-20201-00-00	Foot Rest, left side steel					1	1
5	-	9E018-08012-00	Spacer, foot rest axle left and right	2	2	2		2	2
	-	1063	Spacer, foot rest axle left and right				2		
6	-	1073	Torsion spring, foot rest	2	2	2	2		
	-	S1A-20204-00-00	Torsion spring, foot rest right side					1	1
	-	S1A-20203-00-00	Torsion spring, foot rest left side					1	1
7	-	S1A-70502-00-00	Bearing, steering upper and lower	2	2	2	2	2	2
8	-	S1A-70504-00-00	Washer, upper and lower bearing support nut	1	1	1	1	1	1
9	-	1101	Screw, engine guard attaching front left and right side	2	2	2	2	2	2
10	-	9BHC0-08045-N0	Screw, foot rest left and right side	2	2	2	2	2	2
11	-	1121	Axle, engine attaching front	1	1	1	1	1	1
12	-	9E008-08018-00	Spacer, engine axle rear	1	1	1	1	1	1
13	-	1162	Triangle, muffler assy holder	1					
14	-	9JTT0-02538-00	O-ring, upper and lower bearing support nut	2	2	2	2	2	2
15	-	9CE06-15822-00	Spring clip, air cleaner case bracket attaching	2	2	2	2	2	2
16	-	1180	Axle, engine attaching rear	1	1	1	1	1	1
17	-	1202	Bolt, front fork cap	1	1	1	1		
18	-	S1A-70604-00-00	Screw, fork pivot					1	1
19	-	1300	Rubber, muffler assy holder	1					
	-	9FHC0-08016-00	Screw, engine guard attaching rear left and right side	2	2	2	2	2	2
20	-	1320	Upper clamp	1	1	1	1		
	-	S1A-70601-00-00	Upper clamp					1	1
21	-	1330	Lower clamp + pivot	1	1	1	1		
	-	S1A-70501-00-00	Lower clamp + pivot					1	1
22	-	1340	Holder handle lower	2	2	2	2		
	-	S1A-70602-00-00	Holder handle lower					2	2
23	-	1350	Attach handle higher	1	1	1	1		
	-	S1A-70603-00-00	Attach handle higher					2	2
24	-	1360	Screw, handle holder	4	4	4	4	4	4
25	-	1420	Bracket, air cleaner case	1	1	1	1	1	1
26	-	9CE05-12715-00	Nut clip M5	1	1	1	1	1	1
27	-	S1A-70503-00-00	Nut, bearing support upper	1	1	1	1	1	1
28	-	4ML-21485	Rubber, engine guard	1	1	1	1	1	1
29	-	38V-21486	Rubber, engine guard	1	1	1	1	1	1
30	-	9BHCE-05012-N0	Screw, muffler assy holder black	2					
31	-	3182	Foam protection			1			
	-	3183	Foam protection				1		

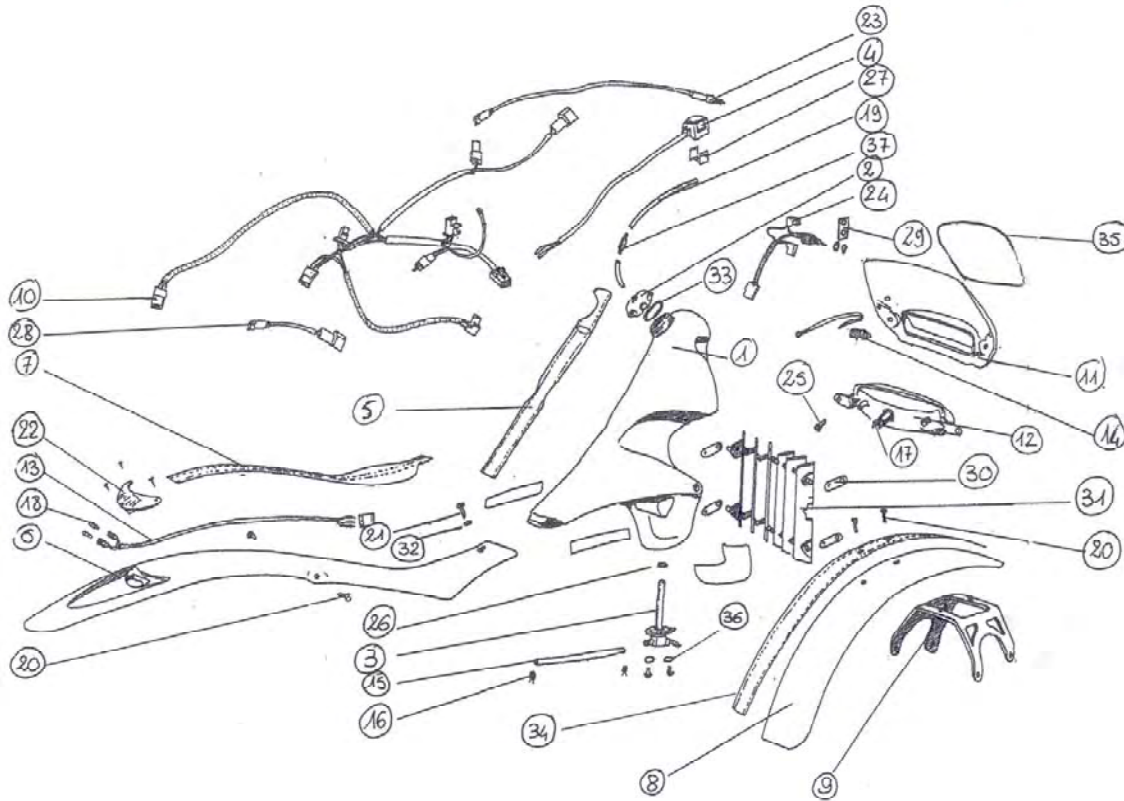


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	2016	Fuel tank	1					
	-	2017	Fuel tank		1				
	-	2019	Fuel tank			1			
	-	2024	Fuel tank				1		
	-	2018	Fuel tank					1	
	-	2025	Fuel tank						1
2	-	2020	Cap, fuel tank	1	1	1	1	1	1
3	-	S1A-80203-00-00	Fuel cock assy	1	1	1	1	1	1
4	-	23X-83976	Mass knob	1	1	1	1	1	1
5	-		<i>See stickers table</i>						
6	-	2077	Fender, rear	1					
	-	2078	Fender, rear		1			1	1
	-	2078P	Fender, rear			1			
	-	2079P	Fender, rear				1		
7	-		<i>See stickers table</i>						
8	-	2095	Fender, front white	1				1	
	-	2097P	Fender, front black		1	1			
9	-	S1A-80101-00-00	Fender, front black				1		1
	-	2113	Bracket, front fender	1				1	1
	-	S1A-80102-00-00	Bracket, front fender		1	1	1		
10	-	2154	Main electrical beam	1	1	1	1	1	1
11	-	2170	Body assy, head light white					1	
	-	2176	Body assy, head light white	1	1				
	-	2177	Body assy, head light blue			1			
	-	2178P	Body assy, head light blue				1		
	-	2171P	Body assy, head light blue						1
12	-	S1A-30101-00-00	Head light unit					1	1
	-	2182	Head light unit	1	1	1	1		
13	-	2193	Wiring electrical, aft	1	1	1	1	1	1
14	-	90036-00202-00	Guide clip, front brake hose	1	1	1	1	1	1
15	-	2232	Fuel hose	1	1	1	1	1	1
16	-	9CLDU-09000-00	Clip, fuel hose	2	2	2	2	2	2
17	-	2250	Head light bulb 12V 15W					1	1
	-	2260	Head light bulb 12V 15W	1	1	1	1		
18	-	2260	Taillight bulb 12V 15W	2	2	2	2	2	2
19	-	2280	Hose, fuel tank	1	1	1	1	1	1
20	-	2322	Screw, nylon TFF M5x20					2	2
	-	2293	Screw, nylon TFF M5x16	2	2	2	2		
21	-	2321	Screw, nylon TFF M5x25	1	1	1	1	1	1
22	-	2340	Taillight lens	1	1	1	1	1	1
23	-	S1A-30904-00-00	Wiring electrical, stoplight	1	1	1	1	1	1
24	-	2381	Wiring electrical, front + interruptor					1	1
	-	2382	Wiring electrical + interruptor	1	1	1	1		
25	-	2390	Tapped nail	2	2	2	2		
26	-	2400	O-ring, fuel cock	1	1	1	1	1	1
27	-	2421	Bracket, mass knob	1	1				
28	-	2434	Regulator shunt	1	1	1	1	1	1
29	-	2500	Bracket, interruptor	1	1	1	1		
30	-	2510	Roast radiator bracket	4	4	4	4	4	4
31	-	4GG-2172A	Roast radiator	1	1	1	1	1	1
32	-	9R0FR-05015-00	Reamed nylon washer	3	3	3	3	3	3
33	-	S1A-80204-00-00	Seal, fuel tank cap	1	1	1	1	1	1
34	-		<i>See stickers table</i>						
35	-		<i>See stickers table</i>						
36	-	9R0SC-05009-00	Washer, fuel cook attaching	2	2	2	2	2	2
37	-	3XJ-24380	Pipe joint assy, fuel tank	1	1	1	1	1	1

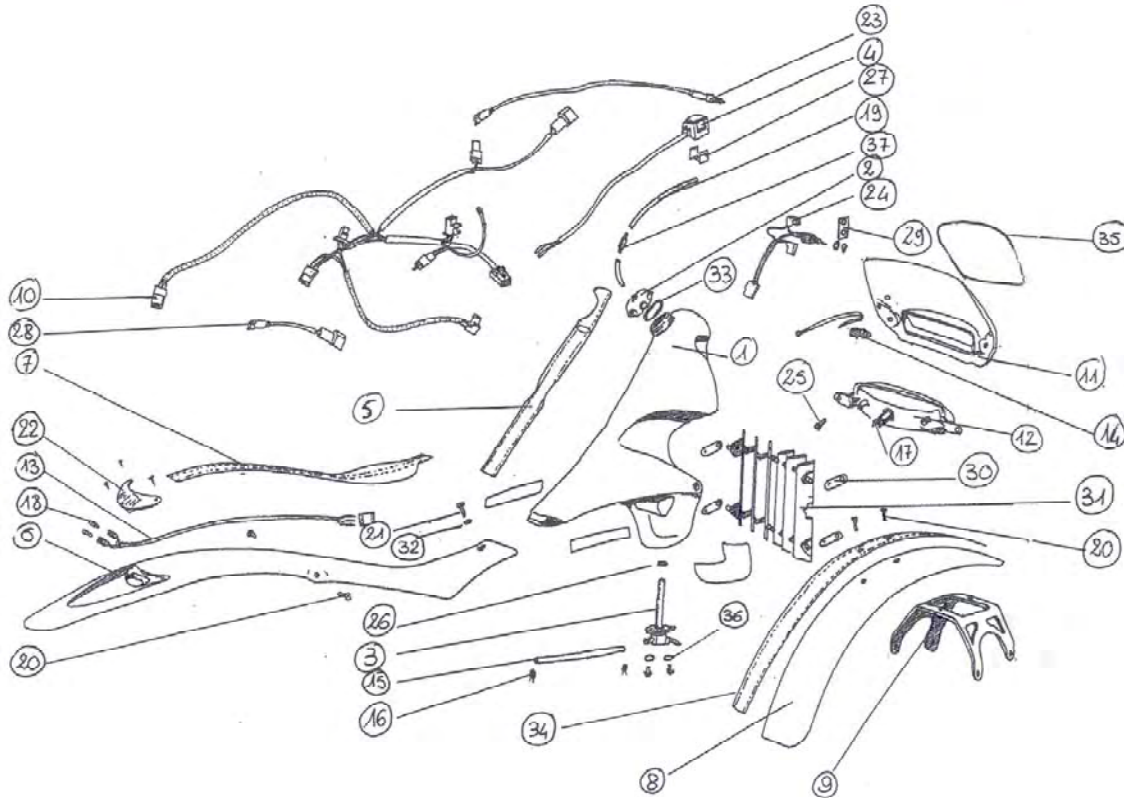

Item	Part Number	Description	SY					LR					
			01	02	03	04	05	03	04	05			
5	2054	Fuel tank sticker								1			
	2053	Fuel tank sticker			1								
	2067	Fuel tank sticker	1										
	2069	Fuel tank sticker		1									
	S4B-90201-00-00	Fuel tank sticker						1					
	S4B-90203-00-00	Fuel tank sticker							1				
	S1A-90202-00-00	Fuel tank upper stickers						2	2				
	2055B	Fuel tank lower sticker left side						1					
	2055C	Fuel tank lower sticker right side						1					
	S4B-90201-02-00	Fuel tank lower sticker left hole								1			
	S4B-90203-02-00	Fuel tank lower sticker right hole								1			
	S4B-90201-01-00	Fuel tank upper sticker left hole								1			
	S4B-90203-01-00	Fuel tank upper sticker right hole								1			
	7	2088	Rear fender sticker	1									
		2089	Rear fender sticker		1								
		2052A	Rear fender sticker, seat			1							
2052B		Rear fender sticker, side			1								
2057A		Rear fender sticker, seat					1						
2057B		Rear fender stickers, side					2	2					
34	2419	Front fender sticker		1						1			
	2418	Front fender sticker			1								
	S1A-90101-00-00	Front fender sticker					1				1		
35	S3B-90101-00-00	Front fender sticker						1				1	
	2276	Head light sticker			1					1			
	2279	Head light sticker	1	1						1			
	2062	Head light sticker					1				1		
	S2B-90501-00-00	Head light sticker							1				
	S5B-90501-00-00	Head light sticker										1	

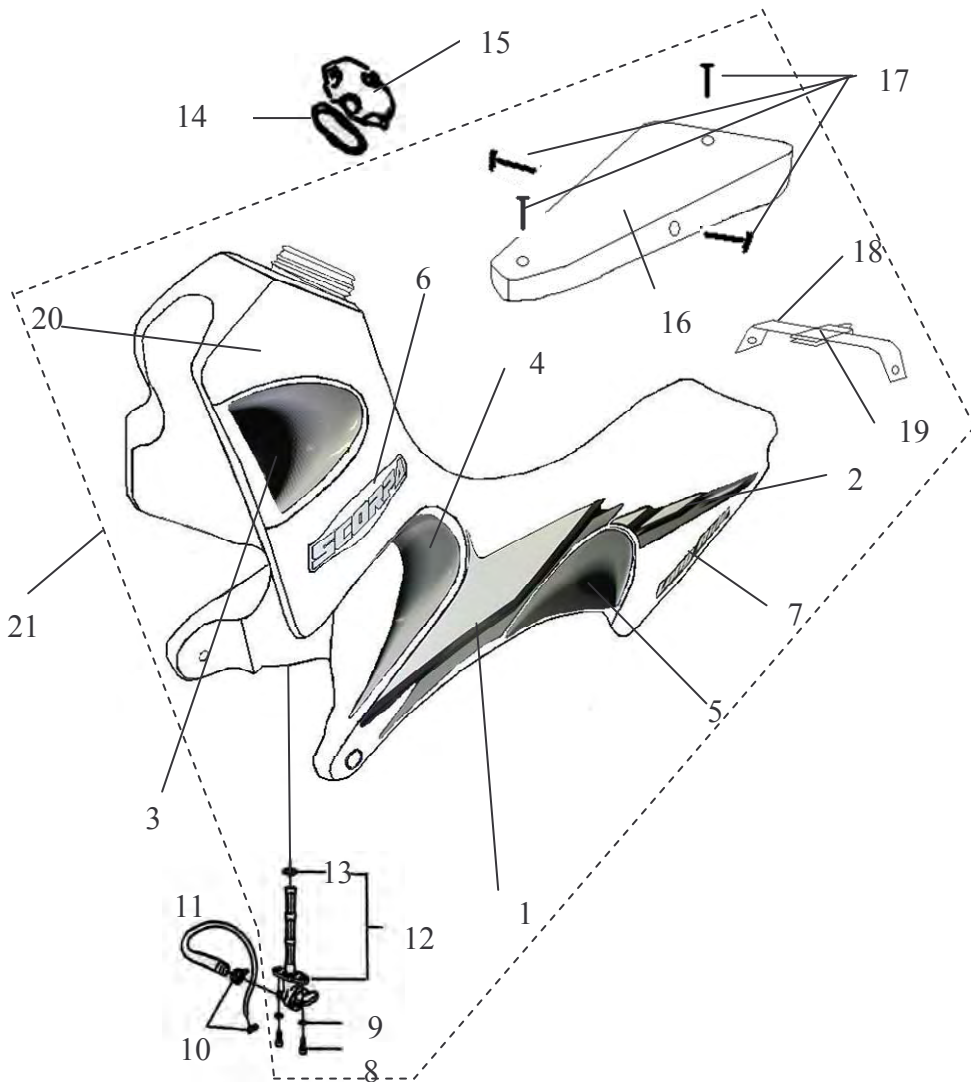



Item	Assembly	Part Number	Description	03	04	05
1	-	2053A	Fuel tank sticker front left side LR 2004		1	
	-	2053B	Fuel tank sticker front right side LR 2004		1	
	-	S5B-90203-0000	Fuel tank sticker front right side LR 2005			1
	-	S5B-90201-0000	Fuel tank sticker front left side LR 2005			1
2	-	2054A	Fuel tank sticker seat left side LR 2004		1	
	-	2054B	Fuel tank sticker seat right side LR 2004		1	
	-	S5B-90203-0100	Fuel tank sticker rear left side LR 2005			1
	-	S5B-90201-0100	Fuel tank sticker rear right side LR 2005			1
3	-	S5B-90203-0400	Fuel tank upper sticker right hole LR 2005			1
	-	S5B-90201-0400	Fuel tank upper sticker left hole LR 2005			1
4	-	S5B-90203-0500	Fuel tank intermediate sticker right hole LR 2005			1
	-	S5B-90201-0500	Fuel tank intermediate sticker left hole LR 2005			1
5	-	S5B-90203-0300	Fuel tank lower sticker right hole LR 2005			1
	-	S5B-90201-0300	Fuel tank lower sticker left hole LR 2005			1
6	-	S1A-90202-0000	Fuel tank sticker SCORPA 2004		2	2
7	-	S5B-90203-0200	Fuel tank sticker Long Ride left side LR 2005			1
	-	S5B-90201-0200	Fuel tank sticker Long Ride right side LR 2005			1
	-	2054	Fuel tank sticker kit Long Ride 2003	1		
	-	S5B-90208-0000	Fuel tank sticker kit Long Ride 2005			1
8	-	9CHC0-05012-00	Bolt CHC M5x12 ZI	2	2	2
9	-	9R0SC-05009-00	Washer Schnor M5 ZI	2	2	2
10	-	9CLDU-09000-00	Fuel hose clip			2
11	-	9DU06-10000-00	Fuel hose			1
12	-	S1A-80203-00-00	Fuel cock assy	1	1	1
13	-	9JTT0-02011-00	O-ring, fuel cock assy			1
14	-	S1A-80204-00-00	Fuel tank seal			1
15	-	2020	Fuel tank cap			1
16	-	2540	Seat long ride	1	1	1
17	-	2293	Bolt nylon TFF M5x16	4	4	4
18	-	2530	Fuel tank long ride fixing	1	1	1
19	-	9CE051271500	Clip, nut M5			1
20	-	2018	Fuel tank Long Ride 2003	1		
	-	2025	Fuel tank Long Ride 2004		1	1
21	-	K06	Fuel tank kit + seat Long Ride	1	1	1

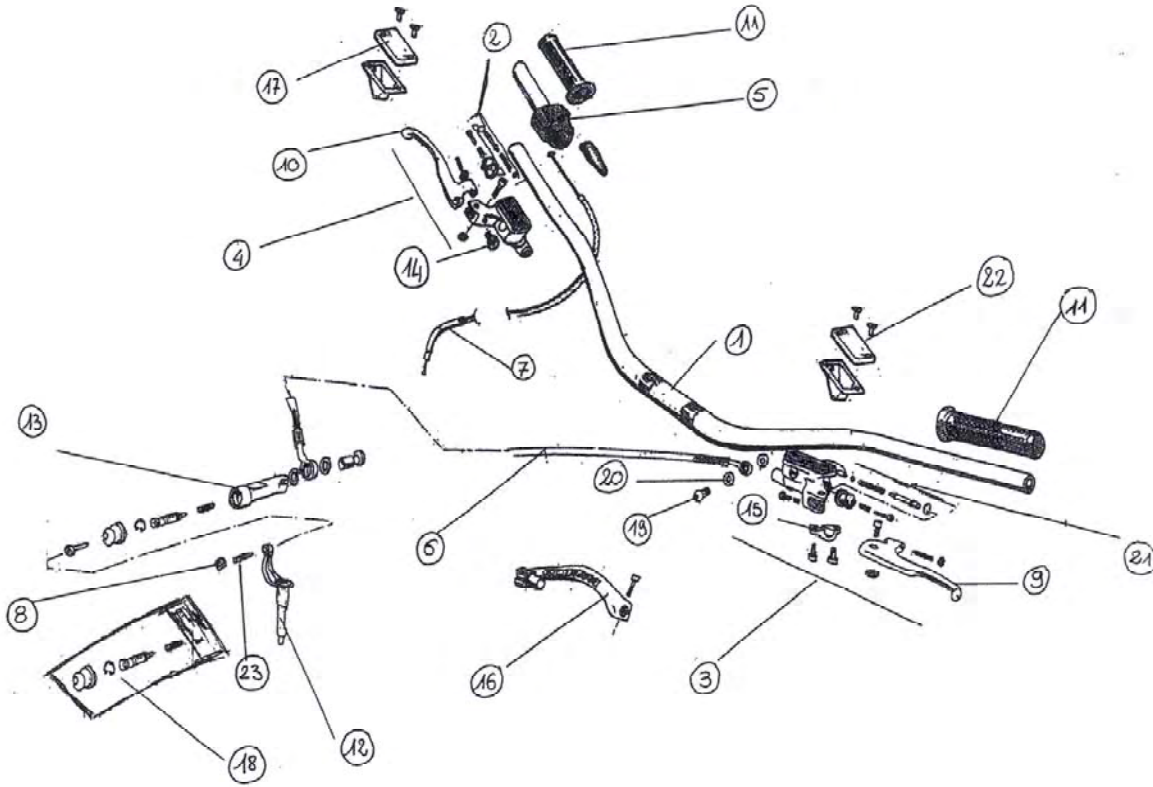


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	S1A-60201-00-00	Handlebar						
	-	3016	Handlebar double diamond black			1			
	-	3017	Handlebar double diamond aluminium	1	1		1		
2	-	S1A-40502-00-00	Repair kit, front master cylinder assy	1	1	1	1	1	1
3	-	3035	Clutch pump assy	1	1	1	1	1	1
4	-	S1A-40501-00-00	Front brake pump assy	1	1	1	1	1	1
5	-	S1A-60204-00-00	Throttle assy	1	1	1	1	1	1
6	-	3064	Hose connection, clutch	1	1	1	1	1	1
7	-	3074	Cable, throttle	1	1	1	1	1	1
8	-	3150C	Setting nut, push lever	1	1	1	1	1	1
9	-	3094	Clutch lever, short	1	1	1	1	1	1
	-	3095	Clutch lever, long	1	1	1	1	1	1
10	-	S1A-40701-00-00	Front brake lever	1	1	1	1	1	1
11	-	S1A-60202-00-00	Grip, handle bar left and right side	1	1	1	1	1	1
12	-	3150	Push lever, clutch	1	1	1	1	1	1
13	-	3160	Slave cylinder	1	1	1	1	1	1
14	-	3190	Sensor, brake light handle	1	1	1	1	1	1
15	-	3201	Clamp	1	1	1	1	1	1
16	-	3221	Shift pedal assy	1	1	1	1	1	1
17	-	3230	Cover, master cylinder	1	1	1	1	1	1
18	-	3240	Repair kit, slave cylinder	1	1	1	1	1	1
19	-	S1A-40603-00-00	Screw, hydraulic sleeve	2	2	2	2		
	-	S1A-40104-00-00	Screw, hydraulic sleeve					2	2
20	-	9R0JT-10014-00	Washer, gasket	4	4	4	4	4	4
21	-	3023	Repair kit, clutch pump	1	1	1	1	1	1
22	-	3231	Cover, clutch pump	1	1	1	1	1	1
23	-	3150B	Setting screw, push lever	1	1	1	1	1	1

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4016	Intermediate exhaust	1	1	1	1	1	1
2	-	4023	Muffler assy	1					
	-	4024	Muffler assy		1	1	1	1	1
3	-	4034	Pipe exhaust	1	1	1	1	1	1
4	-	4043	Air cleaner case	1	1	1	1	1	1
5	-	S1A-10604-00-00	Bracket, air cleaner filter	1	1	1	1	1	1
6	-	S1A-10602-00-00	Air cleaner filter	1	1	1	1	1	1
7	-	4081	Locking collar, hose 16/25	4	4	4	4	4	4
8	-	4121	Hose, pump / radiator	1	1	1	1	1	1
9	-	4131	Hose, head cylinder / radiator	1	1	1	1	1	1
10	-	4142	Radiator	1	1	1	1	1	1
11	-	4151	Ventilator	1	1	1	1	1	1
12	-	4162	Bracket, ventilator	1	1	1	1	1	1
13	-	4171	Silent block, radiator	2	2	2	2	2	2
14	-	4241	Radiator cap	1	1	1	1	1	1
15	-	4252	Hose, radiator	1	1	1	1	1	1
16	-	4260	Thermostatic probe	1	1	1	1	1	1
17	-	4380	Flap, Air cleaner bracket	1	1	1	1	1	1
18	-	4280	Copper washer	1	1	1	1	1	1
19	-	4292	O-ring, muffler assy	1	1	1	1	1	1
20	-	4320	Clip, flap	1	1	1	1	1	1
21	-	4330	Flap, shock absorber	1	1	1	1	1	1
22	-	S1A-10605-00-00	Clip, air cleaner bracket	2	2	2	2	2	2
23	-	4361	O-ring, exhaust (from n°1 to n°400386)	2	2	2	2	2	2
	-	4362	O-ring, exhaust (from n°400387)	2	2	2	2	2	2
24	-	4370	Nut Wellnut, radiator / tank	1	1	1	1	1	1
25	-	90460-58124	Locking collar, air cleaner box sleeve	1	1	1	1	1	1
26	-	39K-14453	Sleeve, air cleaner / carburettor	1	1	1	1	1	1
27	-	90460-51059	Locking collar, carburettor sleeve	1	1	1	1	1	1
28	-	9FHC0-06016-00	Screw FHC M6x16	1	1	1	1	1	1
29	-	3PA-14613-10	Seal. exhaust pipe	1	1	1	1	1	1

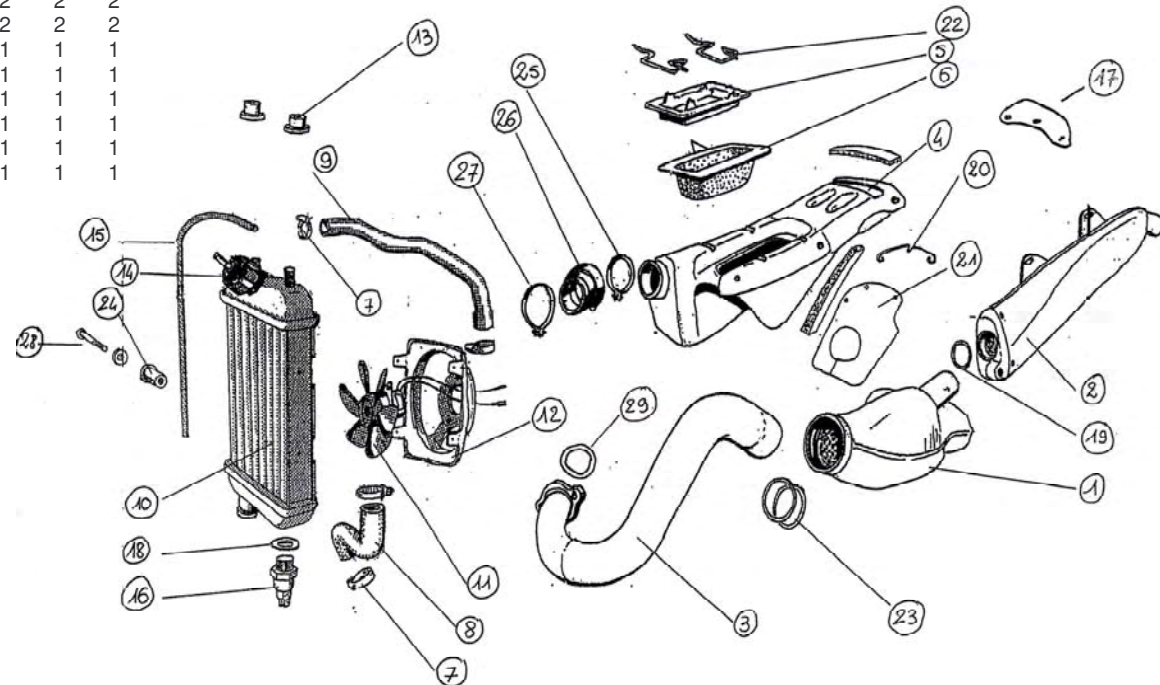


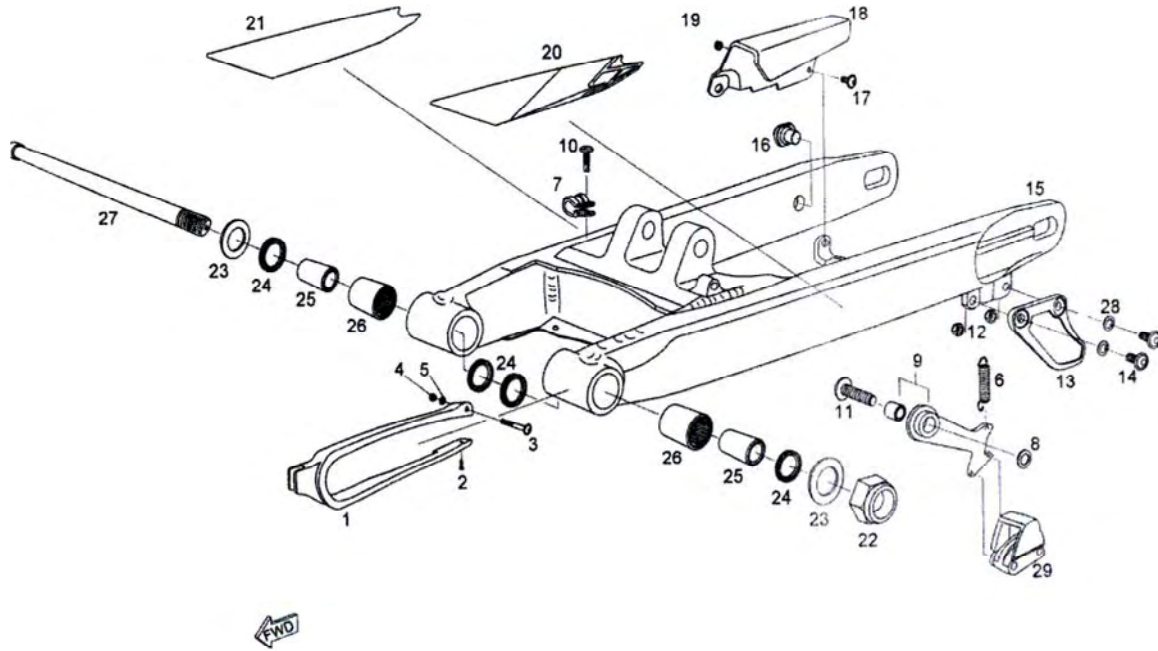


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	S1A-20305-00-00	Seal, chain guard	1	1	1	1	1	1
2	-	9VSTA-05016-00	Bolt, chain guard seal attaching lower	1	1	1	1	1	1
3	-	9BHCE-05040-N0	Bolt, chain guard seal attaching upper	1	1	1	1	1	1
4	-	9EC08-05000-00	Nut, chain guard attaching upper	1	1	1	1	1	1
5	-	9R0PL-05010-00	Washer, chain guard attaching upper	1	1	1	1	1	1
6	-	S1A-20307-00-00	Spring, chain puller	1	1	1	1	1	1
7	-	90008-42812-00	Holder, brake hose	1	1	1	1	1	1
8	-	9R0PL-08018-00	Washer, chain puller attaching	1	1	1	1	1	1
9	-	5084	Bracket + spacer, chain puller	1	1			1	1
10	-	5085B	Bracket + spacer, chain puller			1	1		
11	-	9VSAU-48016-00	Self-tapping screw, brake hose holder	1	1	1	1	1	1
12	-	9BHCE-08030-N0	Nut, chain puller attaching	1	1	1	1	1	1
13	-	9EC08-06000-00	Nut, driven sprocket protective plate	2	2	2	2	2	2
14	-	4ML-22199-00	Protective plate, driven sprocket	1	1	1	1	1	1
15	-	9BHCE-06020-00	Bolt, driven sprocket protective plate	2	2	2	2	2	2
	-	5014	Rear swing arm	1	1			1	1
	-	5015	Rear swing arm			1			
	-	S1A-20301-00-00	Rear swing arm				1		
16	-	S1A-20306-00-00	Stop, rear brake calliper	1	1	1	1	1	1
17	-	9BHCE-05012-N0	Bolt, chain cover attaching	1	1	1	1	1	1
18	-	4GG-22311-30-00	Cover, chain	1	1	1	1	1	1
19	-	9EC08-05000-00	Nut, chain cover attaching aft	1	1	1	1	1	1
20	-	5193	Sticker, rear arm			1			
	-	S1A-90401-00-00	Sticker, rear arm left side				1		
21	-	S1A-90402-00-00	Sticker, rear arm right side				1		
22	-	9EC08-14000-00	Nut, rear arm axle	1	1	1	1	1	1
23	-	9R0NY-20033-00	Nylon washer, rear arm axle left and right side	2	2	2	2	2	2
24	-	9SP20-02604-00	Oil seal, rear arm axle left and right side	4	4	4	4	4	4
25	-	9E051-14020-00	Spacer, rear arm axle left and right side	2	2	2	2	2	2
26	-	9007H-K2030-00	Bearing, rear arm axle left and right side	2	2	2	2	2	2
27	-	S1A-20302-00-00	Axle, rear arm	1	1	1	1	1	1
28	-	9R0PL-06019-00	Washer, driven sprocket protective plate	2	2	2	2	2	2
29	-	S1A-20304-00-00	Skid, chain puller	1	1	1	1	1	1

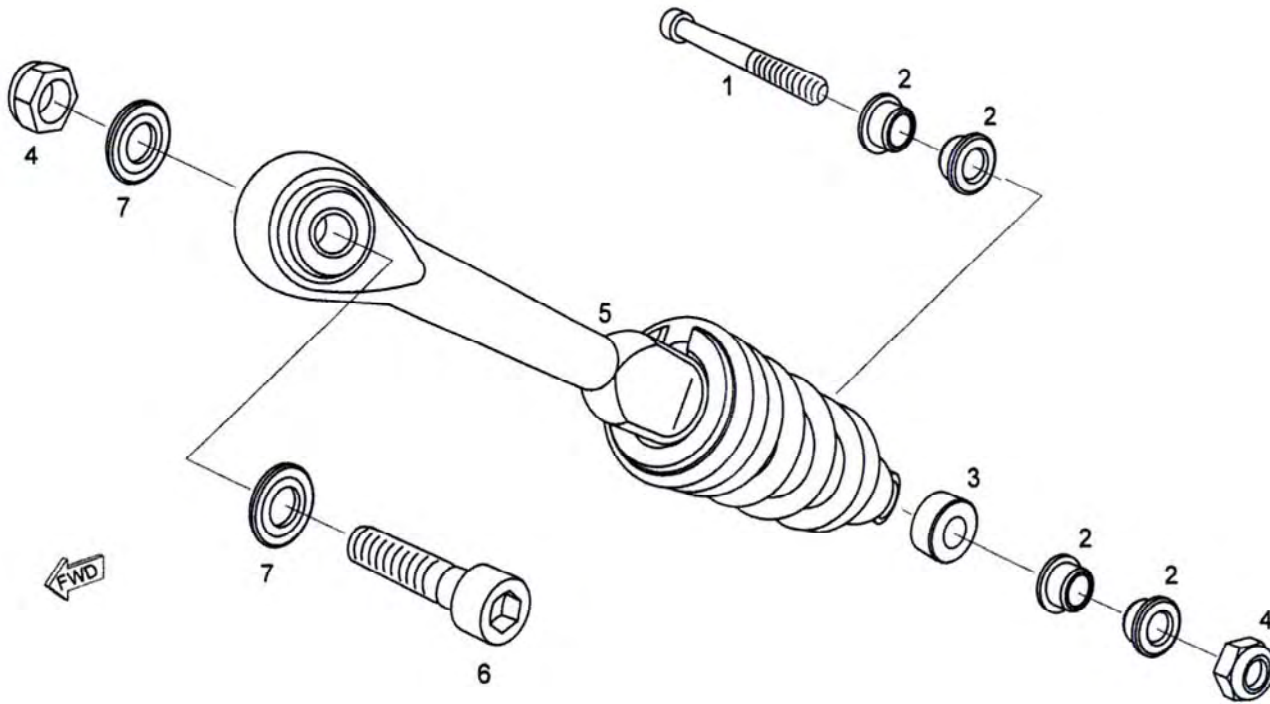


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	9CHC0-10090-00	Axle, rear suspension shock absorber lower	1	1	1	1	1	1
2	-	9E011-10020-15	Spacer, rear suspension shock absorber axle lower left and right	1	1	1	1	1	1
3	-	9E010-10022-00	Spacer, intermediate rear suspension shock absorber axle lower	1	1	1	1	1	1
4	-	9EC08-10000-00	Nut, rear suspension shock absorber axle upper and lower	1	1	1	1	1	1
5	-	S1A-20501-00-00	Shock absorber, rear suspension	1	1	1	1	1	1
6	-	9CHC0-10045-00	Axle, rear suspension shock absorber upper	1	1	1	1	1	1
7	-	9R0PL-10022-00	Washer, rear suspension shock absorber axle upper	1	1	1	1	1	1

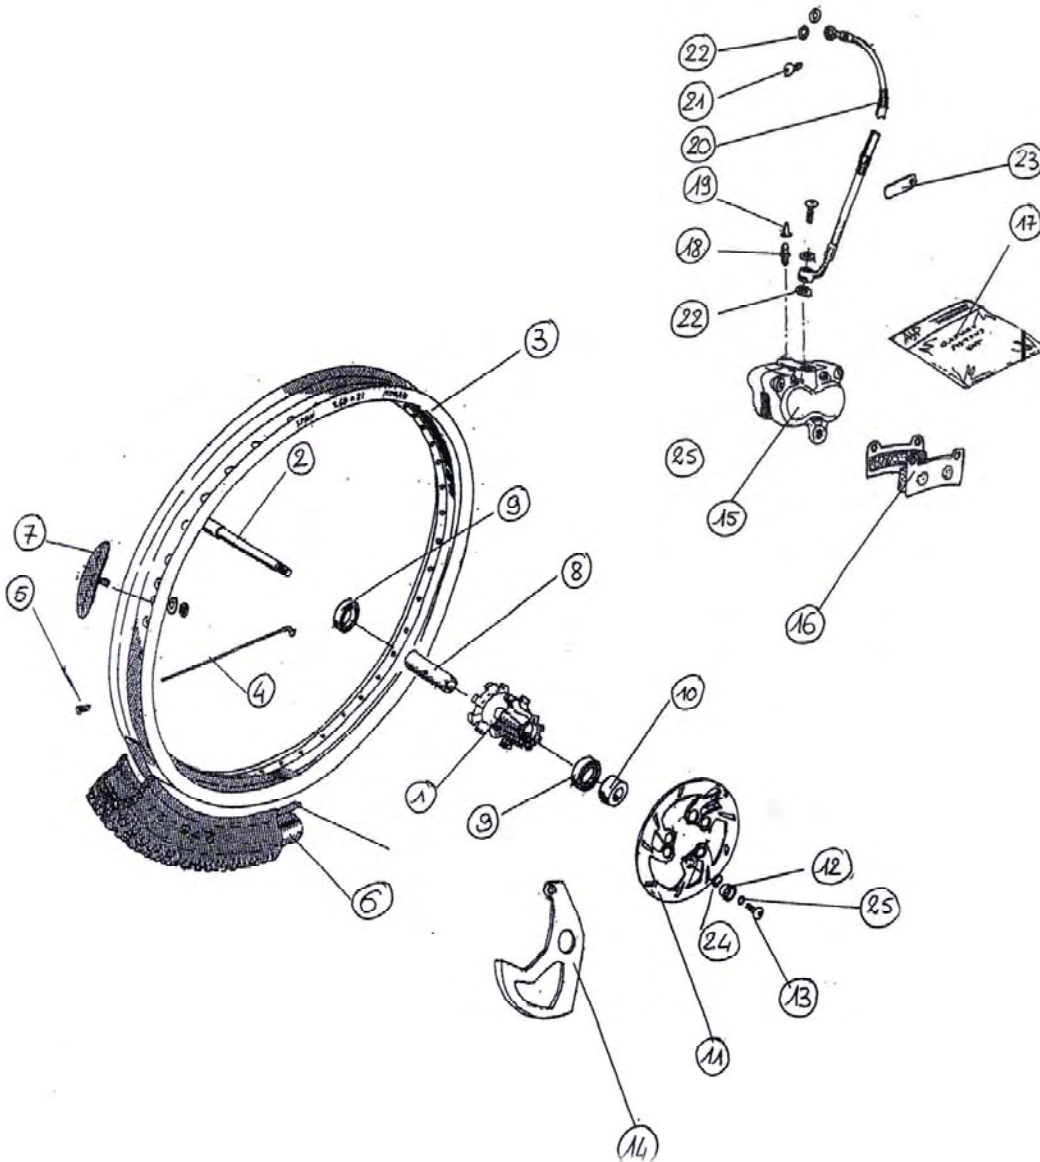

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	6023	Hub 36 holes, front wheel	1				1	1
	-	6024	Hub 32 holes, front wheel		1	1	1		
2	-	6033	Axle, front wheel	1				1	1
	-	6034	Axle, front wheel		1	1	1		
3	-	6052	Rim 36 spokes, front wheel	1				1	1
	-	9J160-02132-00	Rim 32 spokes, front wheel		1	1	1		
4	-	6070	Spoke set, front wheel	36				36	36
	-	6071	Spoke set, front wheel right side		16	16	16		
	-	6072	Spoke set, front wheel left side		16	16	16		
5	-	9ECRA-03055-00	Nut, front wheel spoke set	36	32	32	32	36	36
6	-	6090	Tube, tire front wheel 2.75x21	1	1	1	1	1	1
7	-	S1A-50102-00-00	Gripster	1	1	1	1	1	1
8	-	6121	Spacer, front wheel hub 32 holes		1	1	1		
	-	6122	Spacer, front wheel hub 36 holes	1				1	1
9	-	93306-00402-00	Bearing, front wheel hub	2				2	2
	-	6131	Bearing, front wheel hub		2	2	2		
10	-	6141	Spacer, front wheel axle					1	1
	-	6142	Spacer, front wheel axle	1					
	-	6143	Spacer, front wheel axle		1	1	1		
11	-	6153	Disc, front brake 6 holes	1				1	1
	-	6154	Disc, front brake 4 holes		1	1	1		
12	-	6160	Spacer, disc	6	4	4	4	6	6
13	-	9BHC0-06020-00	Screw, front brake disc	6	4	4	4	6	6
14	-	6183	Aluminium cover, front brake disc	1					
	-	6184	Aluminium cover, front brake disc		1	1	1		
	-	S1A-80601-00-00	Plastic cover, front brake disc					1	1
15	-	6203	Calliper, front brake	1	1	1	1	1	1
16	-	6211	Pad kit, front brake	1	1	1	1	1	1
17	-	6231	Joints kit, calliper	1	1	1	1	1	1
18	-	S1A-40105-00-00	Bolt, calliper bleed	1	1	1	1	1	1
19	-	S1A-40208-00-00	Cap, calliper bleed bolt	1	1	1	1	1	1
20	-	6264	Hose, front brake	1	1	1	1	1	1
21	-	S1A-40603-00-00	Bolt, union front brake master cylinder hose	2	2				
	-	S1A-40104-00-00	Bolt, union front brake master cylinder hose			2	2	2	2
22	-	9R0JT-10014-00	Aluminium washer, front brake master cylinder hose	4	4	4	4	4	4
23	-	5340	Lug, front brake hose	1				1	1
24	-	6340	O-ring, disc spacer			4	4		
25	-	9R0SC-06010-00	Washer Schnorr M6	6	4	4	4	6	6

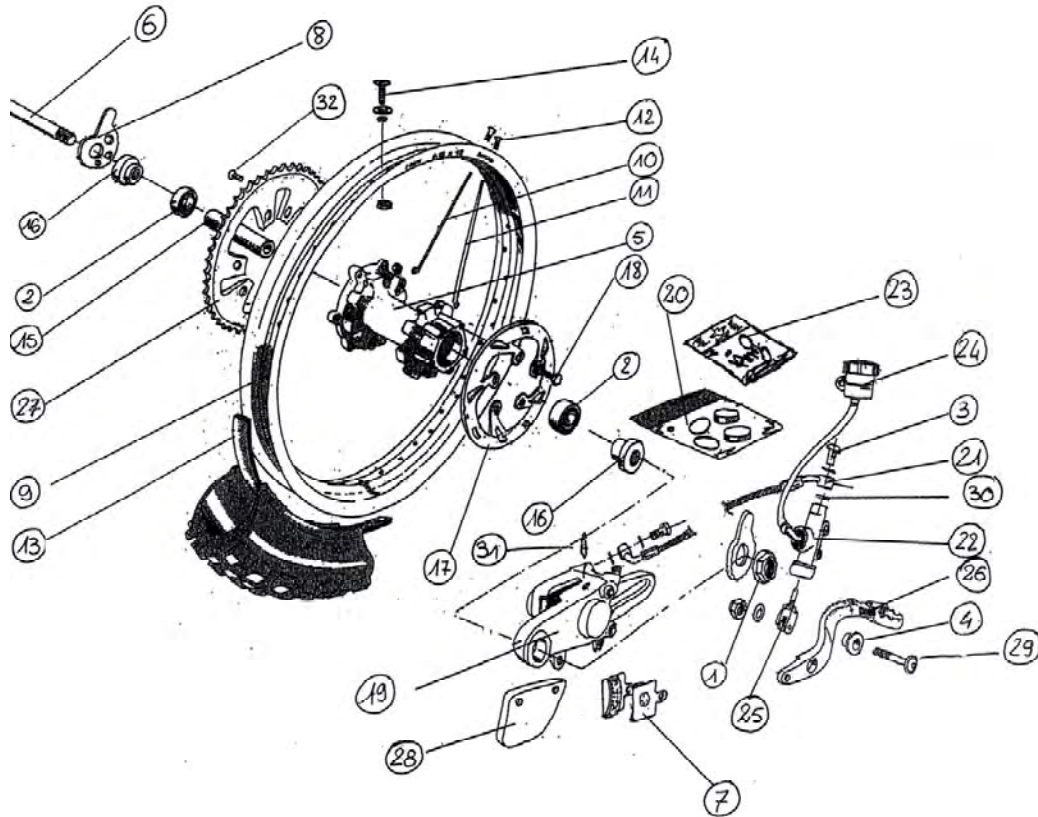


Item	Assembly	Part Number	Description	SY					LR	
				01	02	03	04	03	04	05
1	-	S1A-50405-00-00	Nut, rear wheel axle	1	1	1	1	1	1	
2	-	93306-00402-00	Bearing, rear wheel left and right side	2	2	2	2	2	2	
3	-	S1A-40603-00-00	Bolt, union rear brake master cylinder	2	2	2	2	2	2	
4	-	9E014-08020-13	Spacer, rear brake pedal	1	1	1	1	1	1	
5	-	7024	Hub 36 holes, rear wheel	1				1	1	
6	-	7025	Hub 32 holes, rear wheel		1	1	1			
7	-	7033	Axle, rear wheel	1	1			1	1	
8	-	S1A-50402-00-00	Axle, rear wheel					1	1	
9	-	S1A-40202-00-00	Pad kit, rear brake	1	1	1	1	1	1	
10	-	7060	Tensioner, rear wheel	2	2			2	2	
11	-	S1A-50404-00-00	Tensioner, rear wheel right side					1	1	
12	-	S1A-50403-00-00	Tensioner, rear wheel left side					1	1	
13	-	7072	Rim 36 holes, rear wheel	1					1	1
14	-	7073	Rim 32 holes, rear wheel		1	1	1			
15	-	7090	Spoke set, rear wheel right side 36 holes	18					18	18
16	-	7101	Spoke set, rear wheel right side 32 holes		16	16	16			
17	-	7100	Spoke set, rear wheel left side 36 holes	18					18	18
18	-	7091	Spoke set, rear wheel left side 32 holes		16	16	16			
19	-	9ECRA-35070-00	Nut, rear wheel spoke set	36	32	32	32	36	36	
20	-	7121	Band, rim rear wheel	1	1	1	1	1	1	
21	-	7130	Valve, rim	1	1	1	1	1	1	
22	-	7141	Spacer, rear wheel	1	1	1	1	1	1	
23	-	9E013-17032-00	Spacer, rear wheel bearing	1	1	1	1	1	1	
24	-	7183	Disc 5 holes, rear brake	1				1	1	
25	-	7184	Disc 4 holes, rear brake		1	1	1			
26	-	90TH0-06020-00	Screw, rear rake disc	6	4	4	4	6	6	
27	-	S1A-40201-00-00	Calliper, rear brake	1	1	1	1	1	1	
28	-	S1A-40209-00-00	Joints kit, calliper	1	1	1	1	1	1	
29	-	S1A-40401-00-00	Hose, rear brake	1	1	1	1	1	1	
30	-	S1A-40601-00-00	Pump, rear brake	1	1	1	1	1	1	
31	-	S1A-40602-00-00	Joints kit, rear brake pump	1	1	1	1	1	1	
32	-	S1A-40204-00-00	Liquid container, rear brake	1	1	1	1	1	1	
33	-	7333	Brake rod kit	1	1	1	1	1	1	
34	-	7345	Pedal, rear brake	1	1	1	1	1	1	
35	-	7393	Driven sprocket (36 tooth, 6 holes)	1						1
36	-	7394	Driven sprocket (38 tooth, 6 holes)						1	1
37	-	7395	Driven sprocket (38 tooth, 4 holes)							
38	-	7396	Driven sprocket (39 tooth, 4 holes)							
39	-	7397	Driven sprocket (36 tooth, 4 holes)		OPT	OPT	OPT			
40	-	4ML-22199	Cover, rear brake disc	1	1	1	1	1	1	
41	-	9BHCE-08003-N0	Screw, rear brake pedal attaching	1	1	1	1	1	1	
42	-	9R0JT-10014-00	Aluminium washer	4	4	4	4	4	4	
43	-	S1A-40207-00-00	Screw, calliper bleed	1	1	1	1	1	1	
44	-	7191	Screw, driven sprocket attaching	6	4	4	4	6	6	
45	-	7345C	Pedal kit, rear brake	1	1	1	1	1	1	

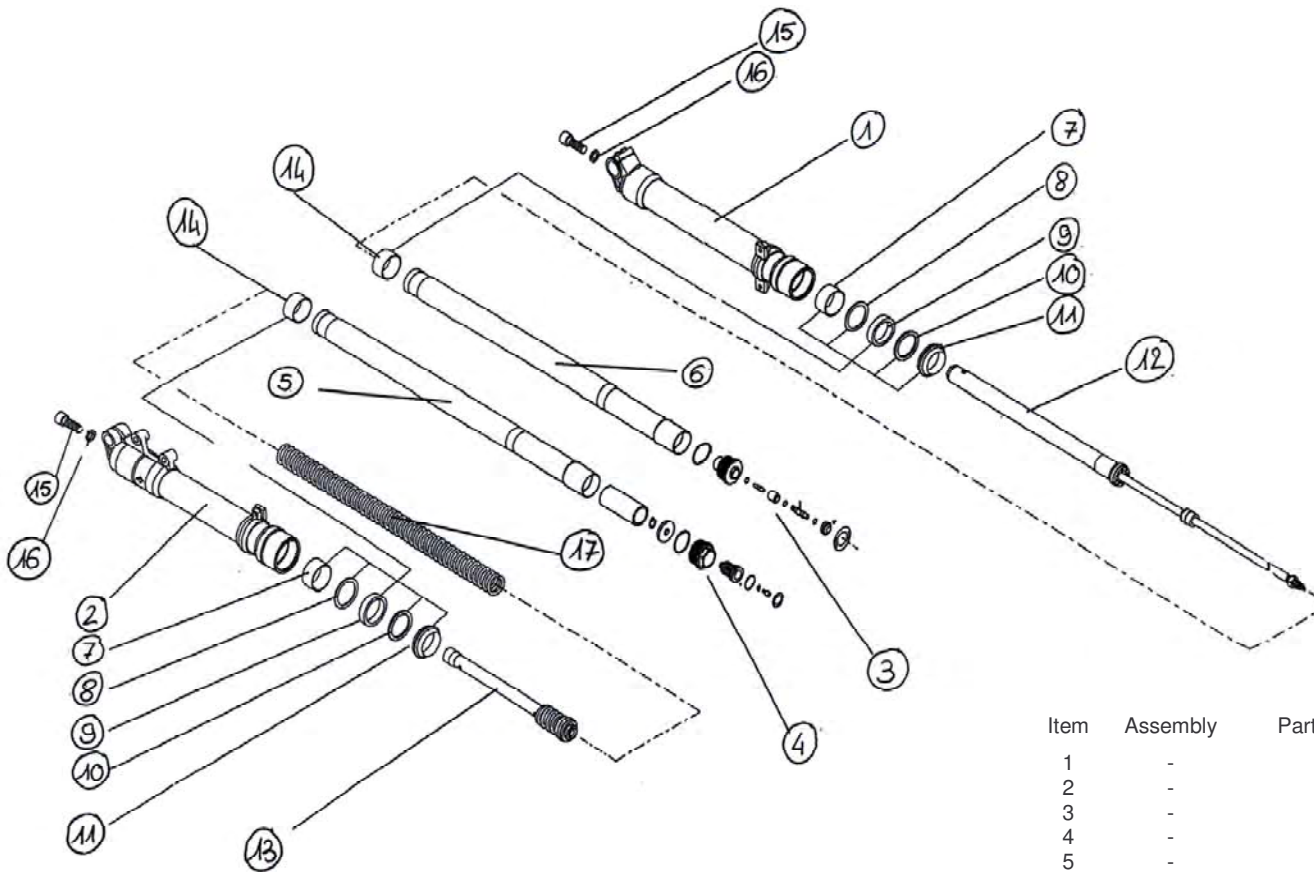


Item	Assembly	Part Number	Description	Quantity		
				SY 01	LR 03	LR 04
1	-	8012	Tube, outer front fork right side	1	1	1
2	-	8022	Tube, outer front fork left side	1	1	1
3	-	8031	Cap kit, right side	1	1	1
4	-	8041	Cap kit, left side	1	1	1
5	-	8051	Cylinder, front fork left side	1	1	1
6	-	8061	Cylinder, front fork right side	1	1	1
7	-	8071	Guide ring, tube	2	2	2
8	-	8081	Niting washer, front fork	2	2	2
9	-	S1A-70111-00-00	Oil seal, front fork	2	2	2
10	-	8101	Holding ring, front fork	2	2	2
11	-	S1A-70108-00-00	Dust boot, front fork	2	2	2
12	-	8121	Hydraulic kit, front fork	1	1	1
13	-	8141	Metering piston, front fork	1	1	1
14	-	8151	Guide ring, cylinder	2	2	2
15	-	8161	Bolt, front fork lower	2	2	2
16	-	8171	Seal, front fork lower	2	2	2
17	-	8241	Spring, front fork	1	1	1


Item	Assembly	Part Number	Applicability	Qty	Item	Assembly	Part Number	Applicability	Qty	Item	Assembly	Part Number	Applicability	Qty	Item	Assembly	Part Number	Applicability	Qty
1	-	949.305.527	Rac.	1	11	-	929.514.008	Rac.	1	21	-	949.512.046	Rac.	1	31	-	949.603.605	Rac.	2
2	-	949.407.070	Rac.	1	12	-	929.603.002	Rac.	1	22	-	949.130.023	Rac.	1	32	-	949.602.002	Rac.	1
3	-	929.514.057	Rac.	2	13	-	919.601.365	Rac.	1	23	-	919.615.023	Rac.	2	33	-	949.130.051	Rac.	1
4	-	929.514.012	Rac.	2	14	-	949.311.587	Rac.	1	24	-	949.125.011	Rac.	1	34	-	919.614.038	Rac.	1
5	-	949.603.667	Rac.	2	15	-	949.501.520	Rac.	1	25	-	949.603.013	Rac.	1	35	-	919.614.058	Rac.	1
6	-	929.608.012	Rac.	2	16	-	949.602.040	Rac.	1	26	-	949.204.046	Rac.	1	36	-	919.614.051	Rac.	2
7	-	949.512.074	Rac.	1	17	-	949.751.012	Rac.	1	27	-	949.603.606	Rac.	2	37	-	919.614.053	Rac.	1
8	-	949.602.210	Rac.	1	18	-	949.511.022	Rac.	1	28	-	919.602.130	Rac.	2	38	-	919.614.055	Rac.	1
9	-	949.512.068	Rac.	1	19	-	949.512.028	Rac.	1	29	-	949.503.150	Rac.	2	39	-	919.614.054	Rac.	1
10	-	949.504.027	Rac.	2	20	-	949.501.519	Rac.	1	30	-	949.503.046	Rac.	1	40	-	949.513.005	Rac.	2

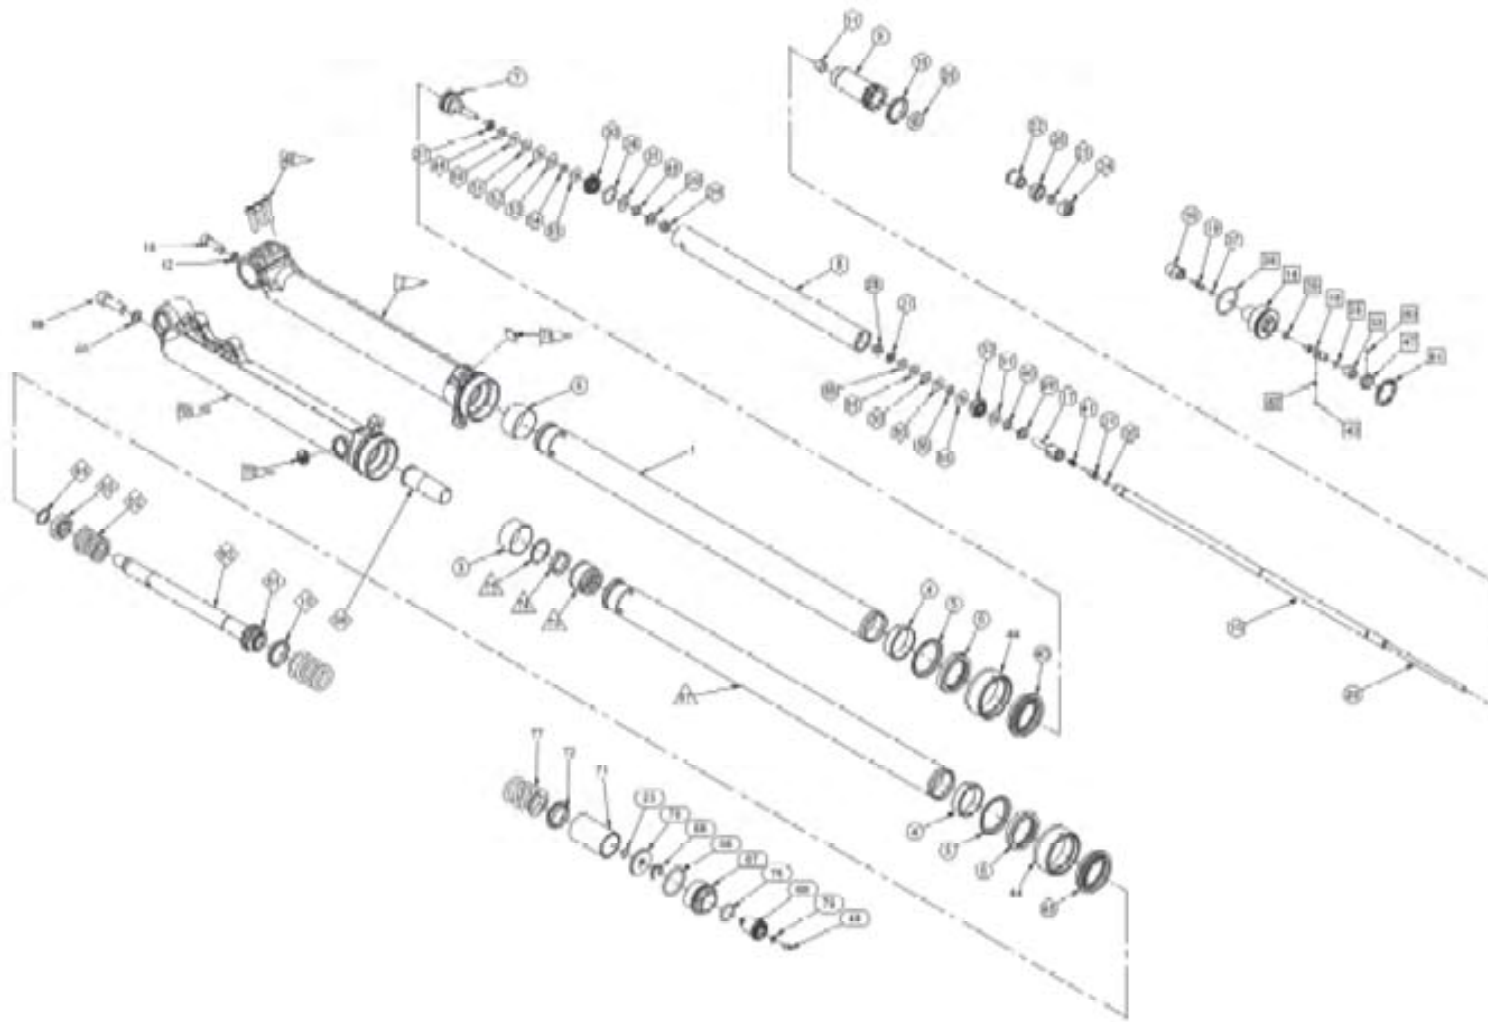

41	-	949.513.010	Rac.	1
42	-	949.314.003	Rac.	1
43	-	919.605.003	Rac.	1
44	-	949.130.144	Rac.	2
45	-	949.421.034	Rac.	2
46	-	919.601.475	Rac.	3
47	-	949.512.130	Rac.	1
48	-	919.601.525	Rac.	1
49	-	949.603.598	Rac.	1
50	-	949.603.600	Rac.	3
51	-	949.603.599	Rac.	1
52	-	949.603.603	Rac.	1
53	-	949.603.602	Rac.	3
54	-	949.603.593	Rac.	1
55	-	949.603.597	Rac.	2
56	-	949.603.594	Rac.	1
57	-	949.305.526	Rac.	1
58	-	949.417.270	Rac.	1
59	-	949.510.064	Rac.	1
60	-	949.501.521	Rac.	1
61	-	949.503.080	Rac.	1
62	-	949.508.029	Rac.	1
63	-	949.603.658	Rac.	1
64	-	919.615.035	Rac.	1
65	-	929.603.020	Rac.	1
66	-	919.601.395	Rac.	1
67	-	949.311.539	Rac.	1
68	-	949.751.044	Rac.	1
69	-	919.615.030	Rac.	1
70	-	949.603.617	Rac.	1
71	-	949.315.252	Rac.	1
72	-	949.603.765	Rac.	1
73	-	949.509.061	Rac.	1
74	-	949.507.034	Rac.	1
75	-	919.615.058	Rac.	1
76	-	919.614.008	Rac.	1
77	-	949.313.882	Rac.	1
78	-	949.007.055	Rac.	2
79	-	949.603.015	Rac.	1
80	-	919.601.170	Rac.	1
81	-	949.007.056	Rac.	1
82	-	949.007.038	Rac.	1
		949.350.115	Rac.	1
		949.311.524	Rac.	1
		949.400.066	Rac.	1
		949.202.138	Rac.	1
		949.307.031	Rac.	1
		949.203.130	Rac.	1
		949.311.123	Rac.	1
		949.340.068	Rac.	2

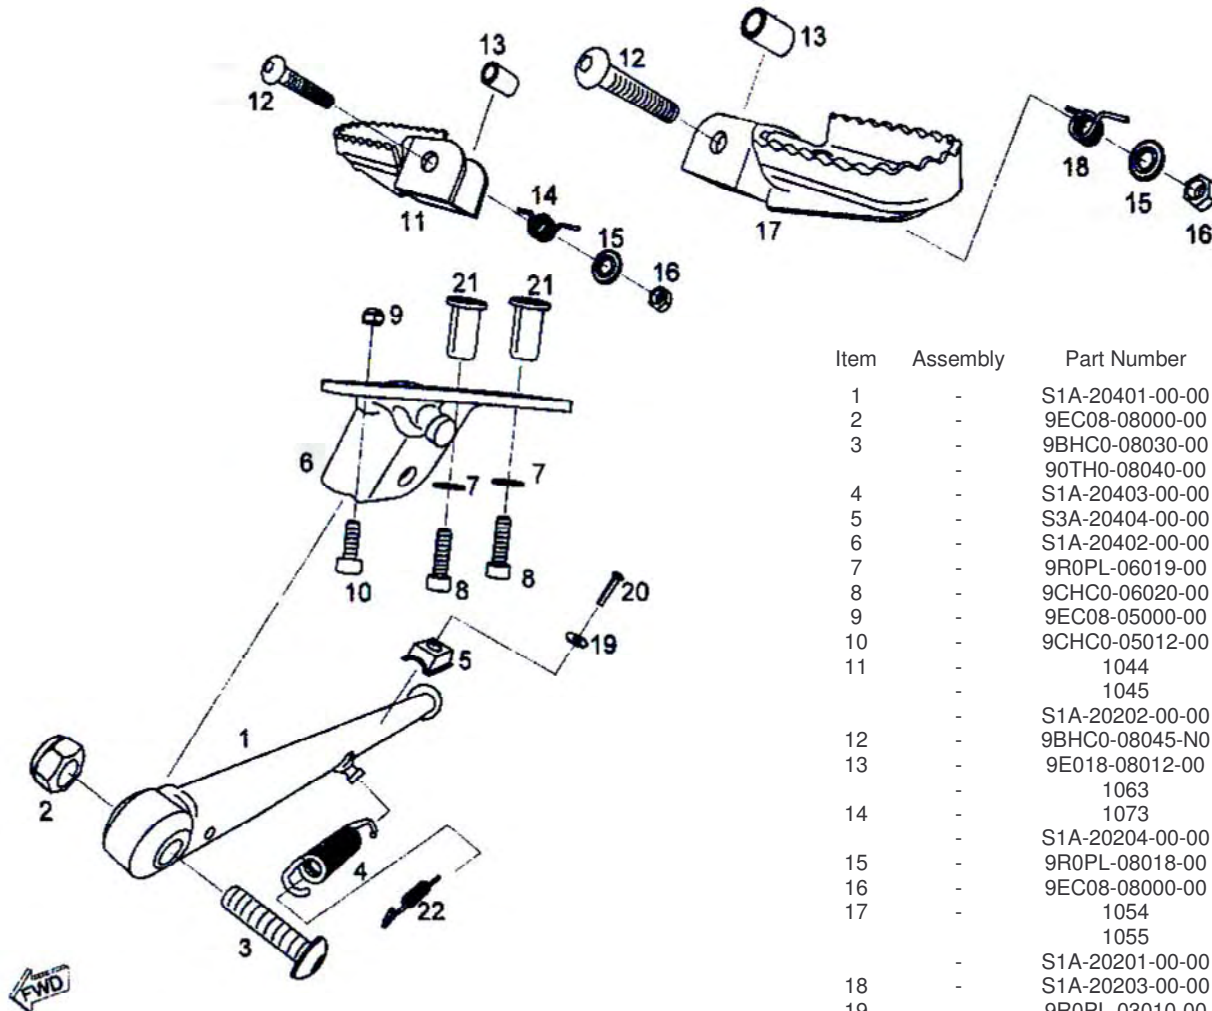


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	S1A-20401-00-00	Side stand	1	1	1	1	1	1
2	-	9EC08-08000-00	Nut, side stand axle	1	1	1	1	1	1
3	-	9BHC0-08030-00	Axle, side stand	1	1	1	1	1	1
4	-	90TH0-08040-00	Axle, side stand	1	1	1	1	1	1
5	-	S3A-20404-00-00	Pad, side stand	1	1	1	1	1	1
6	-	S1A-20402-00-00	Bracket, side stand	1	1	1	1	1	1
7	-	9R0PL-06019-00	Washer, side stand bracket attaching center and aft	2	2	2	2	2	2
8	-	9CHC0-06020-00	Bolt, side stand bracket attaching center and aft	2	2	2	2	2	2
9	-	9EC08-05000-00	Nut, side stand bracket attaching front	1	1	1	1	1	1
10	-	9CHC0-05012-00	Bolt, side stand bracket attaching front	1	1	1	1	1	1
11	-	1044	Footrest, right side	1	1	1			
	-	1045	Footrest, right side				1		
	-	S1A-20202-00-00	Footrest, right side steel					1	1
12	-	9BHC0-08045-N0	Bolt, footrest left and right side	2	2	2	2	2	2
13	-	9E018-08012-00	Spacer, footrest axle left and right side	2	2	2		2	2
	-	1063	Spacer, footrest axle left and right side				2		
14	-	1073	Torsion spring, footrest	2	2	2	2		
	-	S1A-20204-00-00	Torsion spring, footrest right side					1	1
15	-	9R0PL-08018-00	Washer, footrest axle left and right side	1	1	1	1	1	1
16	-	9EC08-08000-00	Nut, footrest axle left and right side	1	1	1	1	1	1
17	-	1054	Footrest, left side	1	1	1			
	-	1055	Footrest, left side				1		
	-	S1A-20201-00-00	Footrest, left side steel					1	1
18	-	S1A-20203-00-00	Torsion spring, footrest left side					1	1
19	-	9R0PL-03010-00	Washer, pad attaching	1	1	1	1	1	1
20	-	90008-37316-00	Pop rivet, pad attaching	1	1	1	1	1	1
21	-	9EC10-06000-00	Nut with rivet	2	2	2	2	2	2

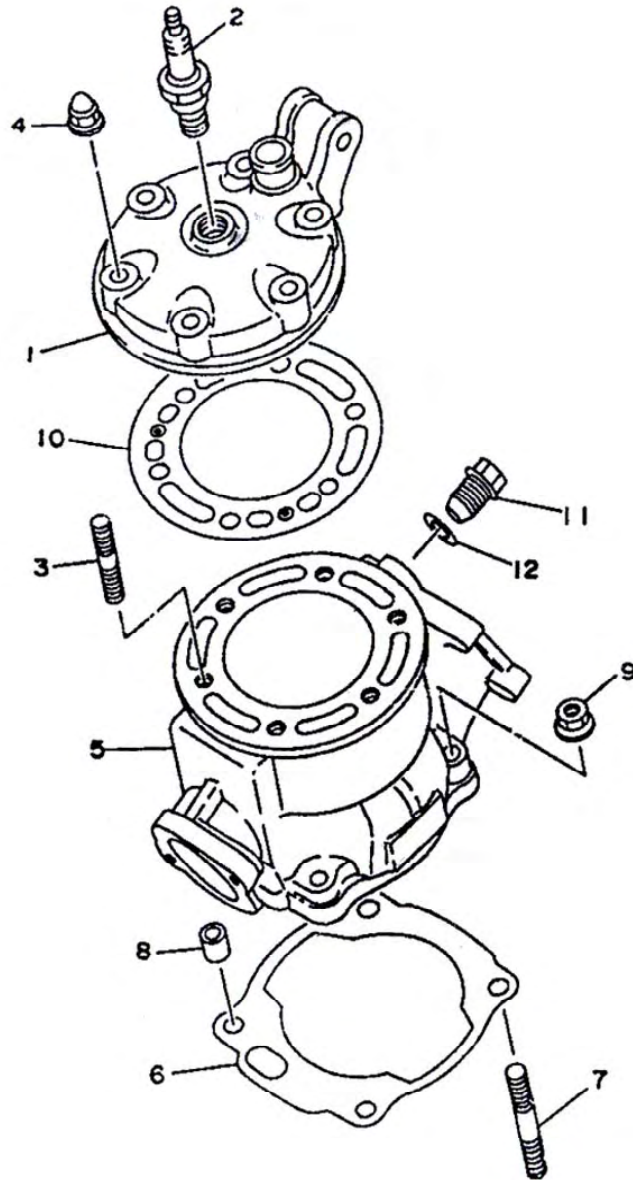


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-11111-00	Head, cylinder	1	1	1	1	1	1
2	-	2131	Spark plug	1	1	1	1	1	1
3	-	90116-08394	Bolt, stud	6	6	6	6	6	6
4	-	90176-08026	Nut, crown	6	6	6	6	6	6
5	-	4ML-11311-00	Cylinder 1	1	1	1	1	1	1
6	-	4GG-11351-00	Gasket, cylinder	1	1	1	1	1	1
7	-	90116-08409	Bolt, stud	4	4	4	4	4	4
8	-	99530-10014	Pin, dowel	2	2	2	2	2	2
9	-	90179-08491	Nut	4	4	4	4	4	4
10	-	4GG-11181-00	Gasket, cylinder head 1	1	1	1	1	1	1
11	-	4GG-12229-00	Plug, blind	1	1	1	1	1	1
12	-	812-11198-00	Gasket	1	1	1	1	1	1



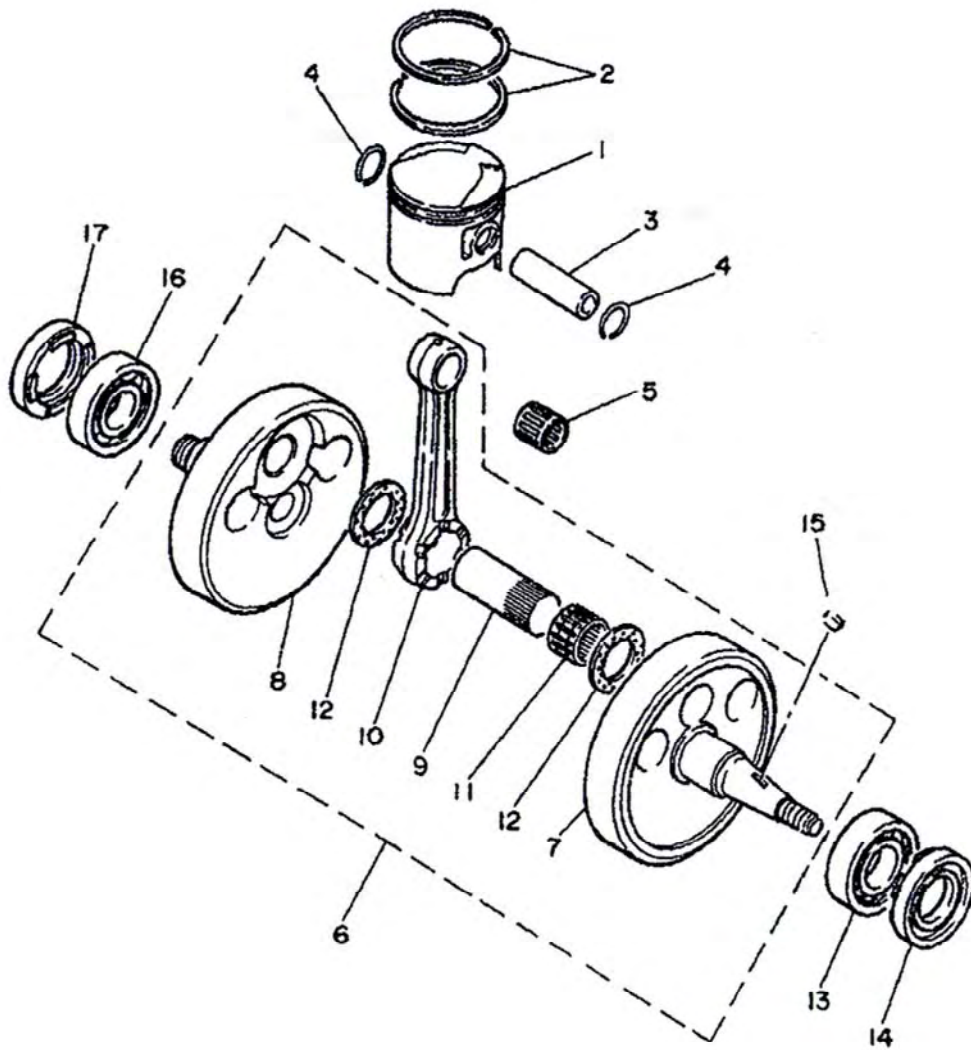


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-11631-00-A0	Piston (STD)	1	1	1	1	1	1
	-	4GG-11631-00-B0	Piston (STD)	1	1	1	1	1	1
	-	4GG-11631-00-00	Piston (STD)	1	1	1	1	1	1
2	-	4GG-11603-01	Piston ring set (STD)	1	1	1	1	1	1
3	-	2TV-11633-00	Pin, piston	1	1	1	1	1	1
4	-	93450-17129	Circlip	2	2	2	2	2	2
5	-	93310-361D5	Bearing, cylindrical	1	1	1	1	1	1
6	-	4GG-11400-00	Crankshaft assy	1	1	1	1	1	1
7	-	4GG-11412-00	Crank 1	1	1	1	1	1	1
8	-	4GG-11422-00	Crank 2	1	1	1	1	1	1
9	-	4GG-11681-00	Pin, crank 1	1	1	1	1	1	1
10	-	3XV-11651-01	Rod, connecting	1	1	1	1	1	1
11	-	93310-52403	Bearing, cylindrical	1	1	1	1	1	1
12	-	90201-246M6	Washer, plate	2	2	2	2	2	2
13	-	93306-30566	Bearing	1	1	1	1	1	1
14	-	93102-25331	Oil seal	1	1	1	1	1	1
15	-	90280-16053	Key, woodruff	1	1	1	1	1	1
16	-	93306-30566	Bearing	1	1	1	1	1	1
17	-	93103-33163	Oil seal	1	1	1	1	1	1



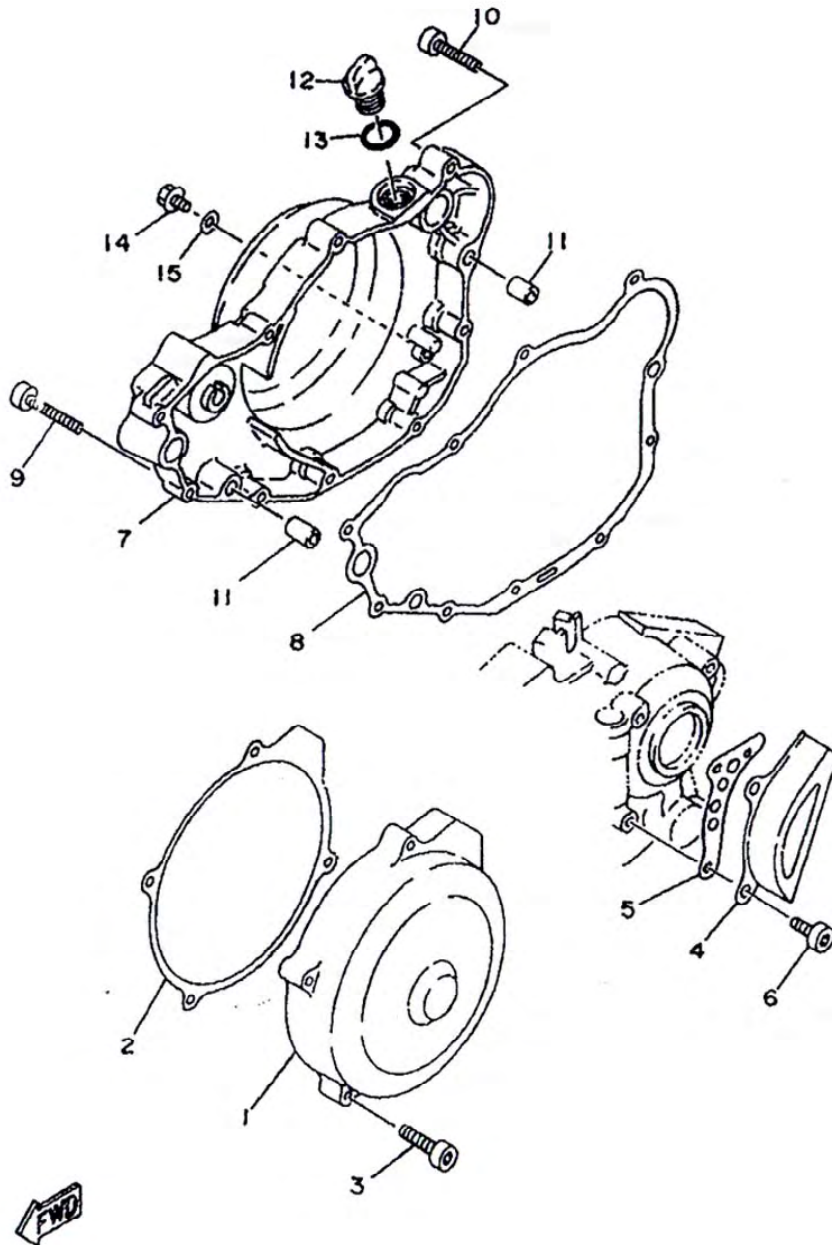


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-15411-00	Cover, crankcase 1	1	1	1	1	1	1
2	-	4GG-15451-00	Gasket, crankcase cover 1	1	1	1	1	1	1
3	-	91317-06030	Bolt, hexagon socket head	4	4	4	4	4	4
4	-	2VM-15421-02	Cover, crankcase 2	1	1	1	1	1	1
5	-	4GG-15418-00	Cover, chain case	1	1	1	1	1	1
6	-	91317-06016	Bolt	2	2	2	2	2	2
7	-	4GG-15431-01	Cover, crankcase 3	1	1	1	1	1	1
8	-	4ML-15462-00	Gasket, crankcase cover 3	1	1	1	1	1	1
9	-	91317-06030	Bolt, hexagon socket head	9	9	9	9	9	9
10	-	91317-06040	Bolt	1	1	1	1	1	1
11	-	99530-10014	Pin, dowel	2	2	2	2	2	2
12	-	1RG-15363-00	Plug, oil	1	1	1	1	1	1
13	-	93210-19123	O-ring	1	1	1	1	1	1
14	-	95027-06008	Bolt, flange	1	1	1	1	1	1
15	-	90430-06014	Gasket	1	1	1	1	1	1

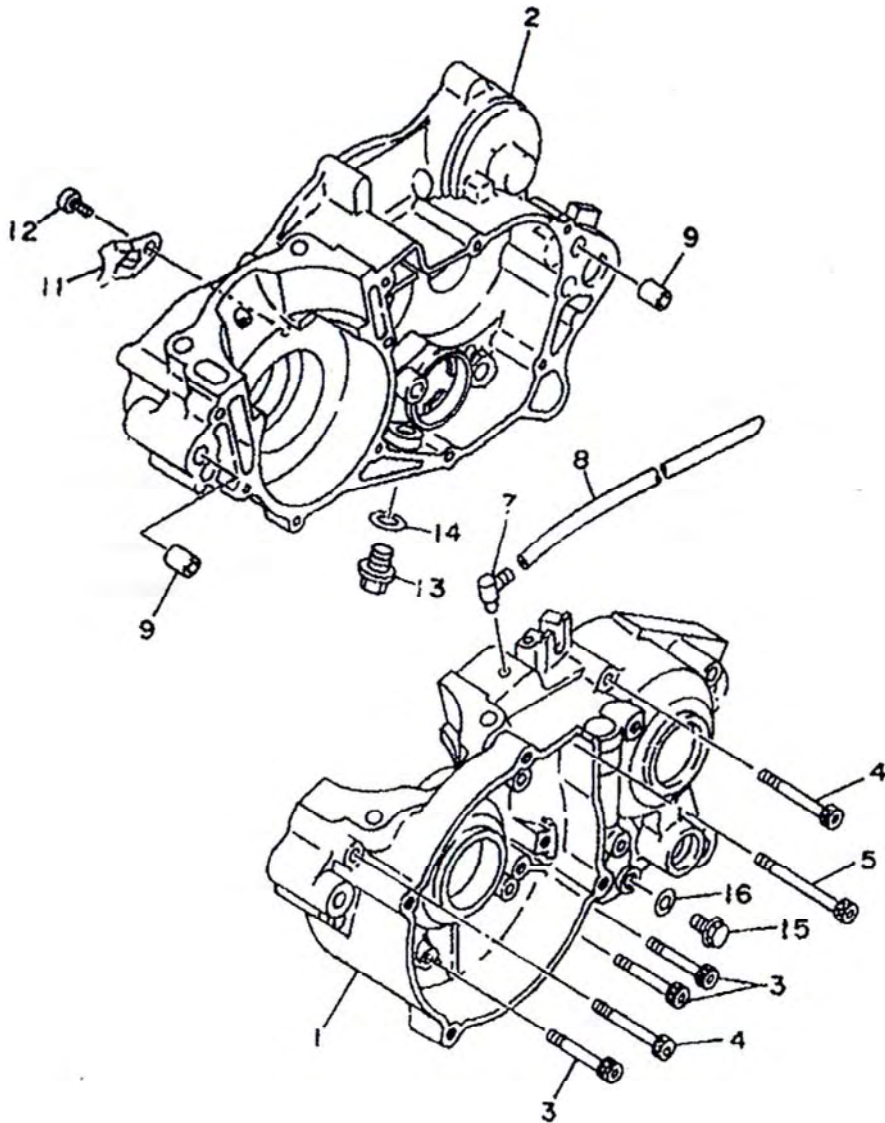


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4ML-15111-00	Crankcase 1	1	1	1	1	1	1
2	-	4GG-15121-00	Crankcase 2	1	1	1	1	1	1
3	-	91317-06055	Bolt	7	7	7	7	7	7
4	-	91317-06060	Bolt	2	2	2	2	2	2
5	-	91317-06070	Bolt, socket head	1	1	1	1	1	1
7	-	353-13115-01	Connector, suction pipe	1	1	1	1	1	1
8	-	90445-08376	Hose	1	1	1	1	1	1
9	-	99510-12016	Pin, dowel	2	2	2	2	2	2
11	-	3R3-15128-01	Holder	1	1	1	1	1	1
12	-	98507-08010	Screw, pan head	1	1	1	1	1	1
13	-	90340-12097	Plug, straight screw	1	1	1	1	1	1
14	-	90430-12202	Gasket	1	1	1	1	1	1
15	-	90340-10108	Plug, straight screw	1	1	1	1	1	1
16	-	90430-10148	Gasket	1	1	1	1	1	1




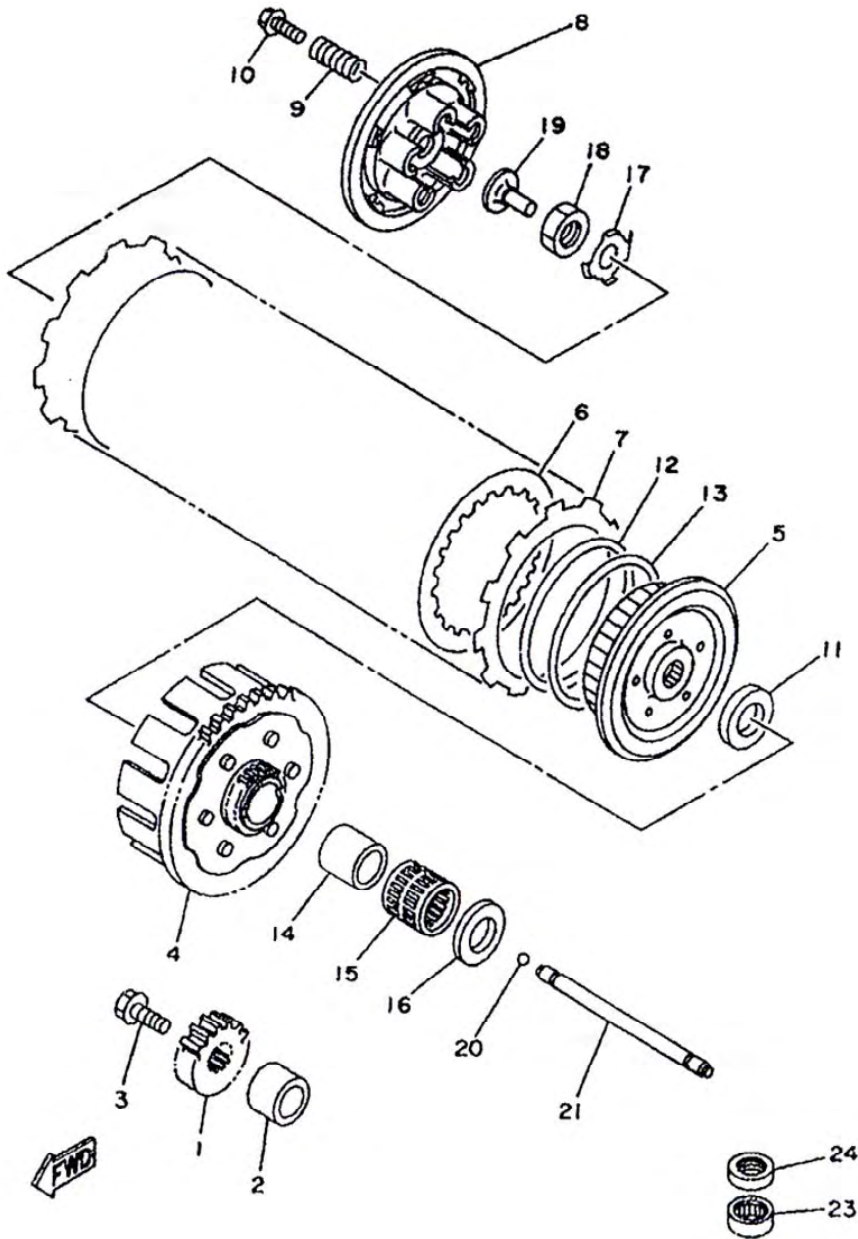

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-16111-10	Gear, primary drive	1	1	1	1	1	1
2	-	90387-205W4	Collar	1	1	1	1	1	1
3	-	90105-10445	Bolt, washed based	1	1	1	1	1	1
4	-	4GG-16150-10	Primary driven gear comp.	1	1	1	1	1	1
5	-	3XJ-16371-00	Boss, clutch	1	1	1	1	1	1
6	-	3XJ-16324-01	Plate, clutch 1	6	6	6	6	6	6
7	-	1KT-16321-00	Plate, friction	7	7	7	7	7	7
8	-	3XJ-16351-00	Plate, pressure 1	1	1	1	1	1	1
9	-	90501-23138	Spring, compression	5	5	5	5	5	5
10	-	90159-06016	Screw, with washer	5	5	5	5	5	5
11	-	90201-204K8	Washer, plate	1	1	1	1	1	1
12	-	3XV-16383-00	Spring, clutch boss	1	1	1	1	1	1
13	-	3XV-16384-10	Plate, seat	1	1	1	1	1	1
14	-	4JT-16181-01	Spacer 1	1	1	1	1	1	1
15	-	93310-225-N0	Bearing, cylindrical	1	1	1	1	1	1
16	-	90201-204K8	Washer, plate	1	1	1	1	1	1
17	-	90215-16289	Washer, lock	1	1	1	1	1	1
18	-	90170-16326	Nut	1	1	1	1	1	1
19	-	4GG-16356-10	Rod, push 1	1	1	1	1	1	1
20	-	93505-16006	Ball	1	1	1	1	1	1
21	-	4GG-16357-00	Rod, push 2	1	1	1	1	1	1
23	-	93315-11206	Bearing, cylindrical	1	1	1	1	1	1
24	-	93102-12224	Oil seal	1	1	1	1	1	1

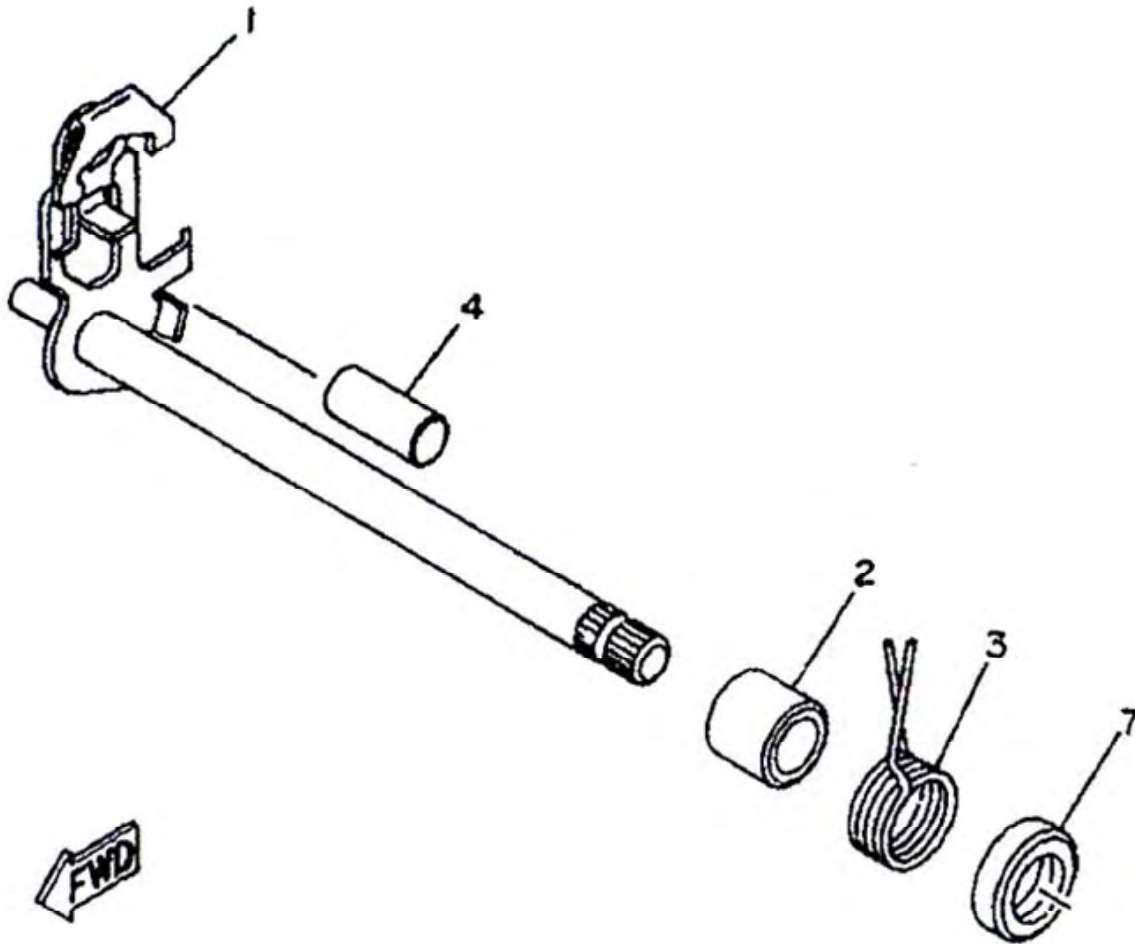


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-18101-00	Shift shaft assy	1	1	1	1	1	1
2	-	90560-12171	Spacer	1	1	1	1	1	1
3	-	90508-29742	Spring, torsion	1	1	1	1	1	1
4	-	93608-33046	Pin, dowel	1	1	1	1	1	1
7	-	93101-12173	Oil seal	1	1	1	1	1	1

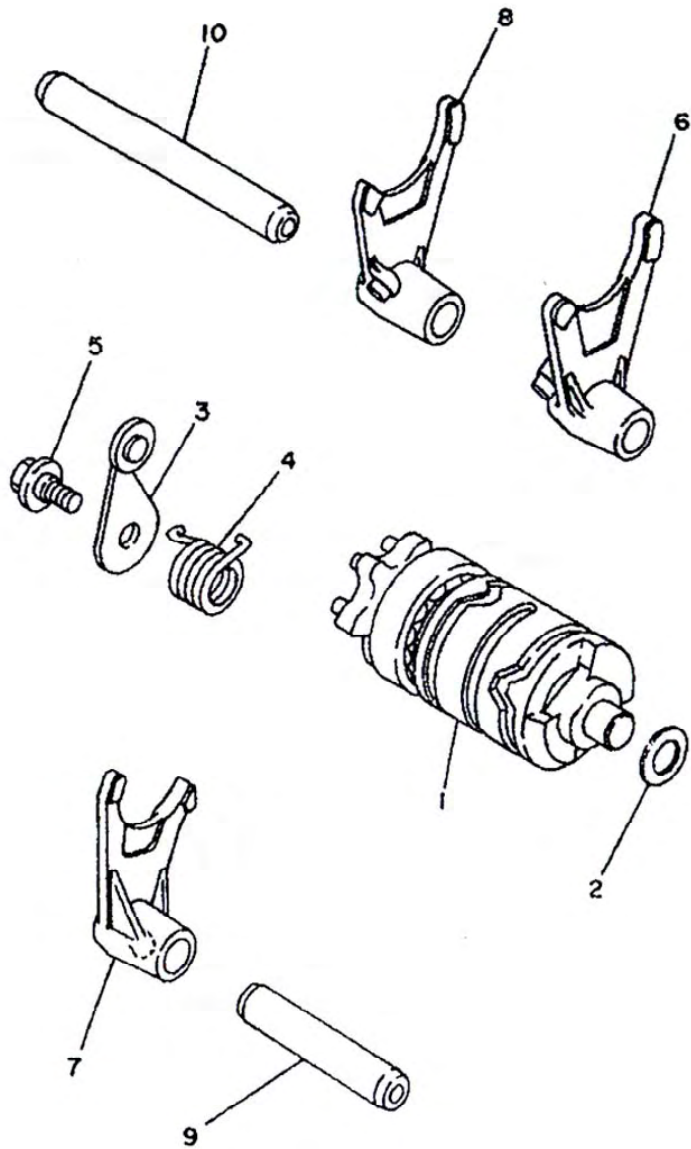


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-18540-00	Shift cam assy	1	1	1	1	1	1
2	-	90201-12166	Washer, plate	1	1	1	1	1	1
3	-	22W-18140-00	Stopper lever assy	1	1	1	1	1	1
4	-	90508-263A9	Spring, torsion	1	1	1	1	1	1
5	-	90109-063F7	Bolt	1	1	1	1	1	1
6	-	4GG-18511-00	Fork, shift 1	1	1	1	1	1	1
7	-	4GG-18512-00	Fork, shift 2	1	1	1	1	1	1
8	-	4GG-18513-00	Fork, shift 3	1	1	1	1	1	1
9	-	4GG-18531-10	Bar, shift fork guide 1	1	1	1	1	1	1
10	-	4GG-18535-10	Bar, shift fork guide 2	1	1	1	1	1	1




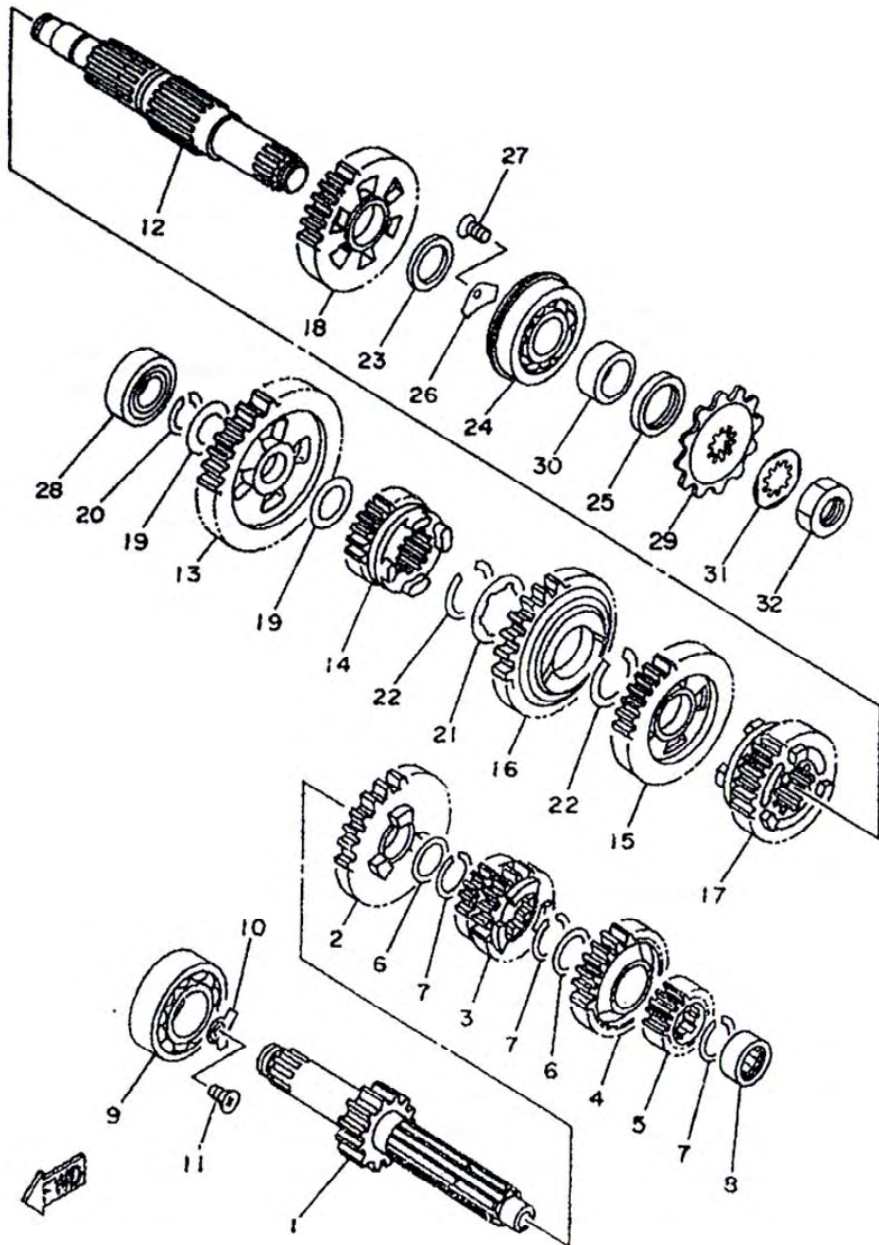

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-17411-00	Axle, main	1	1	1	1	1	1
2	-	4GG-17161-00	Gear, 6 th pinion	1	1	1	1	1	1
3	-	4GG-17131-00	Gear, 3 rd pinion	1	1	1	1	1	1
4	-	4GG-17151-00	Gear, 5 th pinion	1	1	1	1	1	1
5	-	4GG-17121-00	Gear 2 nd pinion	1	1	1	1	1	1
6	-	90201-20266	Washer plate	2	2	2	2	2	2
7	-	93410-20038	Circlip	3	3	3	3	3	3
8	-	93311-41530	Bearing, cylindrical	1	1	1	1	1	1
9	-	93306-20446	Bearing	1	1	1	1	1	1
10	-	1LX-15383-00	Plate, bearing cover	2	2	2	2	2	2
11	-	98707-06012	Screw, flat head	2	2	2	2	2	2
12	-	4GG-17421-00	Axle, drive	1	1	1	1	1	1
13	-	4GG-17211-00	Gear, 1 st wheel	1	1	1	1	1	1
14	-	4GG-17261-00	Gear, 6 th wheel	1	1	1	1	1	1
15	-	4GG-17241-00	Gear, 4 th wheel	1	1	1	1	1	1
16	-	4GG-17231-00	Gear, 3 rd wheel	1	1	1	1	1	1
17	-	4GG-17251-00	Gear, 5 th wheel	1	1	1	1	1	1
18	-	4GG-17221-00	Gear, 2 nd wheel	1	1	1	1	1	1
19	-	90201-177G4	Washer, plate	2	2	2	2	2	2
20	-	93410-17037	Circlip	1	1	1	1	1	1
21	-	90209-18208	Washer	1	1	1	1	1	1
22	-	93410-22039	Circlip	2	2	2	2	2	2
23	-	90201-206K8	Washer, plate	1	1	1	1	1	1
24	-	93306-30411	Bearing	1	1	1	1	1	1
25	-	93102-26042	Oil seal	1	1	1	1	1	1
26	-	3XJ-15383-00	Plate, bearing cover	1	1	1	1	1	1
27	-	98707-06012	Screw, flat head	1	1	1	1	1	1
28	-	93306-00315	Bearing	1	1	1	1	1	1
29	-	9383A-10193	Sprocket, drive (10T)	1	1	1	1	1	1
	-	9383A-11195	Sprocket, drive (11T)	1	1	1	1	1	1
	-	9383A-12017	Sprocket, drive (2HG1746120)	1	1	1	1	1	1
30	-	90387-204Y5	Collar	1	1	1	1	1	1
31	-	90215-20261	Washer, lock	1	1	1	1	1	1
32	-	90179-16226	Nut	1	1	1	1	1	1

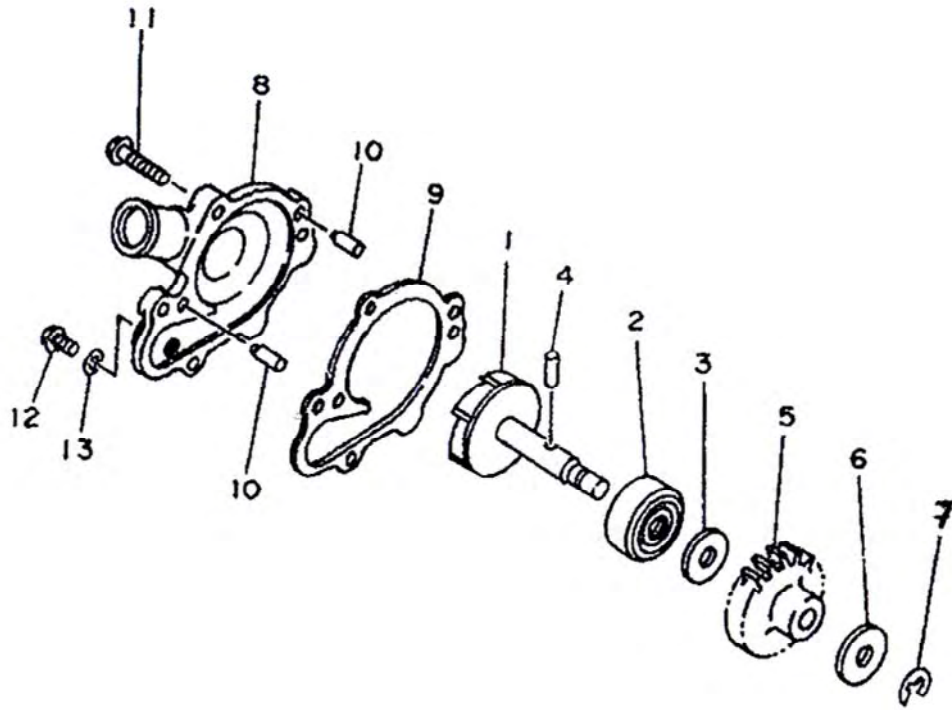


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	1KT-12450-00	Impeller shaft assy	1	1	1	1	1	1
2	-	93103-10168	Oil seal	1	1	1	1	1	1
3	-	90201-08759	Washer, plate	1	1	1	1	1	1
4	-	93603-22028	Pin, dowel	1	1	1	1	1	1
5	-	4GG-12459-00	Gear, impeller shaft	1	1	1	1	1	1
6	-	90201-08784	Washer, plate	1	1	1	1	1	1
7	-	99001-06600	Circlip	1	1	1	1	1	1
8	-	3XC-12422-10	Cover, housing	1	1	1	1	1	1
9	-	1KT-12428-01	Gasket, housing cover 2	1	1	1	1	1	1
10	-	93604-10011	Pin, dowel	2	2	2	2	2	2
11	-	91317-06025	Bolt	4	4	4	4	4	4
12	-	92017-08012	Screw	1	1	1	1	1	1
13	-	90201-08087	Washer, plate	1	1	1	1	1	1

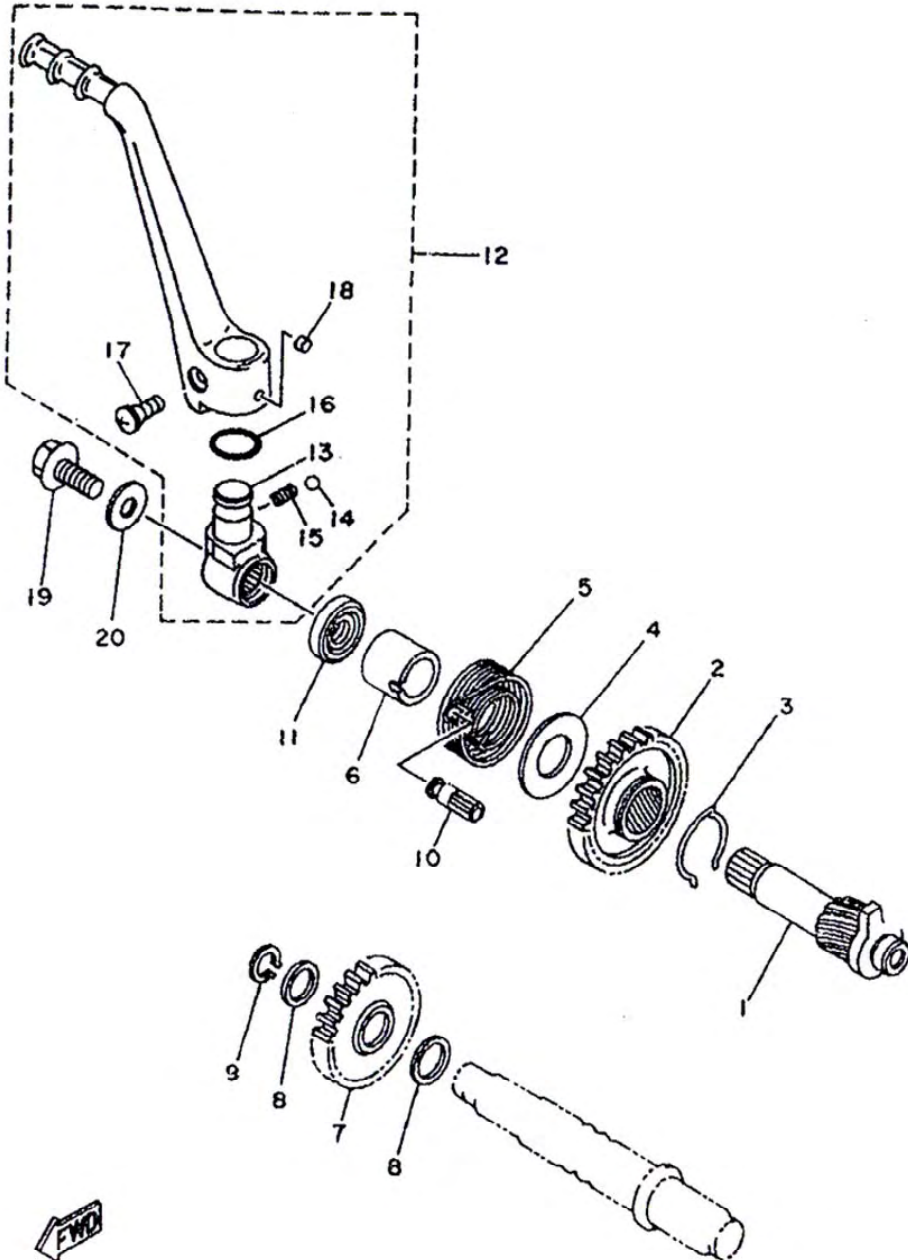


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-15661-00	Axle, kick	1	1	1	1	1	1
2	-	4GG-15641-00	Gear, kick	1	1	1	1	1	1
3	-	90468-26091	Clip	1	1	1	1	1	1
4	-	90201-202F9	Washer, plate	1	1	1	1	1	1
5	-	90508-282A4	Spring, torsion	1	1	1	1	1	1
6	-	1KT-15666-00	Spacer	1	1	1	1	1	1
7	-	4GG-15651-00	Gear, kick idle	1	1	1	1	1	1
8	-	90201-154E8	Washer, plate	2	2	2	2	2	2
9	-	93440-15012	Circlip	1	1	1	1	1	1
10	-	248-15668-00	Stopper	1	1	1	1	1	1
11	-	93102-20309	Oil seal	1	1	1	1	1	1
12	-	4GG-15620-00	Kick crank assy	1	1	1	1	1	1
13	-	24Y-15621-01	Boss, kick crank	1	1	1	1	1	1
14	-	93501-04011	Ball	1	1	1	1	1	1
15	-	90501-13720	Spring, compression	1	1	1	1	1	1
16	-	93210-19216	o-ring	1	1	1	1	1	1
17	-	90152-06010	Screw, countersunk	1	1	1	1	1	1
18	-	90336-05043	Plug, taper	1	1	1	1	1	1
19	-	9502-08020	Bolt, flange	1	1	1	1	1	1
20	-	90201-087A9	Washer, plate	1	1	1	1	1	1




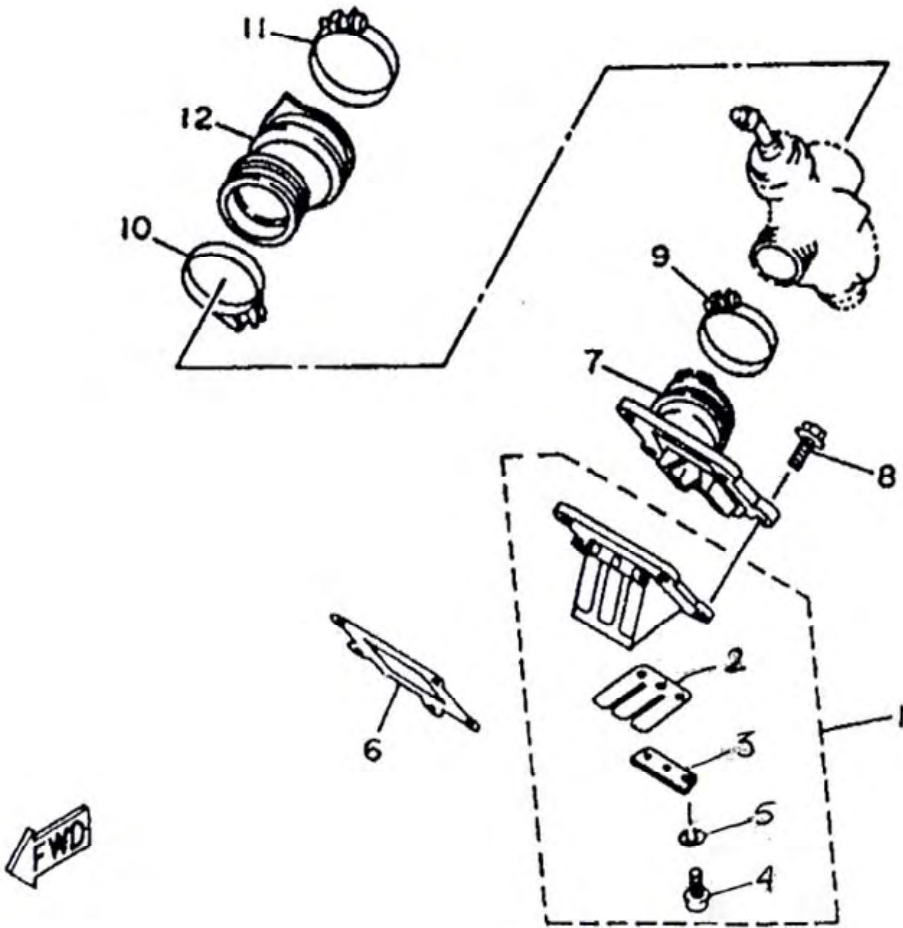

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-13610-10	Reed valve assy	1	1	1	1	1	1
2	-	4GG-13613-10	Reed, valve	2	2	2	2	2	2
3	-	4GG-13616-10	Stopper, reed valve	2	2	2	2	2	2
4	-	98507-03008	Screw, pan head	6	6	6	6	6	6
5	-	92990-03100	Washer, spring	6	6	6	6	6	6
6	-	4GG-13621-00	Gasket, valve seat	1	1	1	1	1	1
7	-	4GG-13565-00	Joint, carburettor	1	1	1	1	1	1
8	-	95027-06020	Bolt, flange	5	5	5	5	5	5
9	-	90460-43053	Clamp, hose	1	1	1	1	1	1
10	-	90460-51059	Clamp, hose	1	1	1	1	1	1
11	-	90460-58015	Clamp, hose	1	1	1	1	1	1
12	-	39K-14453-00	Joint, air cleaner 1	1	1	1	1	1	1

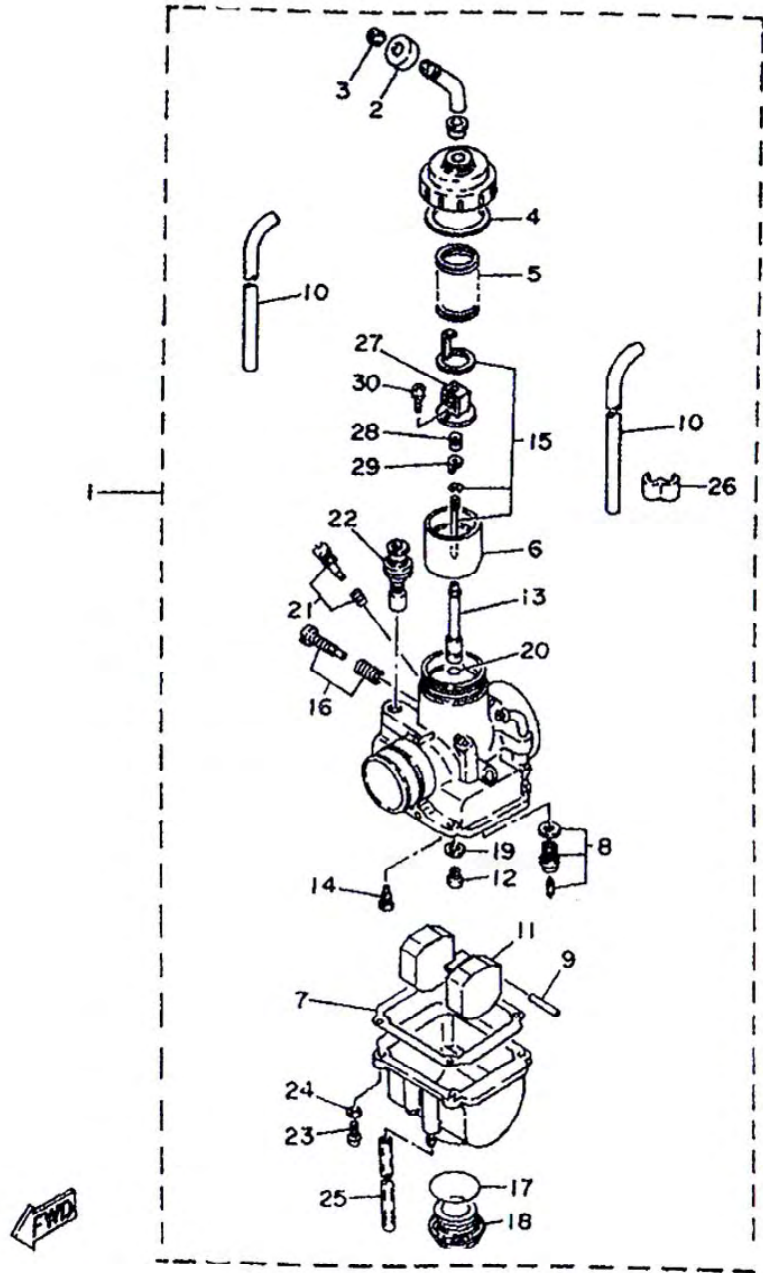


Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-14301-00	Carburetor assy	1	1	1	1	1	1
2	-	15A-14118-00	Cap	1	1	1	1	1	1
3	-	288-14161-00	Nut, cable adjusting	1	1	1	1	1	1
4	-	4GG-14126-00	Gasket	1	1	1	1	1	1
5	-	4GG-14331-00	Spring, throttle valve	1	1	1	1	1	1
6	-	4GG-14312-20	Valve, throttle 1	1	1	1	1	1	1
7	-	4ML-14384-00	Gasket, float chamber	1	1	1	1	1	1
8	-	46Y-14107-00	Needle valve set	1	1	1	1	1	1
9	-	647-14386-10	Pin, float	1	1	1	1	1	1
10	-	367-14396-00	Pipe	2	2	2	2	2	2
11	-	46Y-14385-00	Float	1	1	1	1	1	1
12	-	288-14355-67	Jet, main (#134)	1	1	1	1	1	1
12	-	288-14343-68	Jet, main (#135)	1	1	1	1	1	1
12	-	288-14343-83	Jet, main (#165)	1	1	1	1	1	1
12	-	288-14343-73	Jet, main (#145)	1	1	1	1	1	1
12	-	288-14343-75	Jet, main (#150)	1	1	1	1	1	1
12	-	288-14343-80	Jet, main (#160)	1	1	1	1	1	1
12	-	288-14343-85	Jet, main (#170)	1	1	1	1	1	1
12	-	288-14343-70	Jet, main (#140)	1	1	1	1	1	1
12	-	288-14329-78	Jet, main (#156)	1	1	1	1	1	1
12	-	288-14329-88	Jet, main (#176)	1	1	1	1	1	1
12	-	288-14343-90	Jet, main (#180)	1	1	1	1	1	1
13	-	4GG-14341-00	Nozzle, main (S-85)	1	1	1	1	1	1
13	-	4GG-14341-20	Nozzle, main (S-80)	1	1	1	1	1	1
13	-	4GG-14341-30	Nozzle, main (S-90)	1	1	1	1	1	1
13	-	4GG-14341-10	Nozzle, main (S-75)	1	1	1	1	1	1
13	-	4GG-14341-40	Nozzle, main (S-95)	1	1	1	1	1	1
13	-	4GG-14341-40	Nozzle, main (#40)	1	1	1	1	1	1
14	-	38V-14342-20	Jet, pilot (#38)	1	1	1	1	1	1
14	-	38V-14342-19	Jet, pilot	1	1	1	1	1	1
14	-	38V-14342-21	Jet, pilot (#42)	1	1	1	1	1	1
14	-	38V-14342-18	Jet, pilot (#44)	1	1	1	1	1	1
14	-	38V-14342-22	Jet, pilot (#46)	1	1	1	1	1	1
14	-	38V-14342-23	Jet, pilot	1	1	1	1	1	1
15	-	4GG-1490J-00	Needle set	1	1	1	1	1	1
16	-	46Y-14103-00	Throttle screw set	1	1	1	1	1	1
17	-	38V-14397-00	O-ring	1	1	1	1	1	1
18	-	38V-14191-00	Plug, drain	1	1	1	1	1	1
19	-	38V-14153-00	Washer, main jet	1	1	1	1	1	1
20	-	360-24512-00	Gasket	1	1	1	1	1	1
21	-	46Y-14104-00	Air screw set	1	1	1	1	1	1
22	-	38V-14371-00	Plunger, starter	1	1	1	1	1	1
23	-	98503-04015	Screw, pan head	4	4	4	4	4	4
24	-	92901-04100	Washer, spring	4	4	4	4	4	4
25	-	367-14396-00	Pipe	1	1	1	1	1	1
26	-	44J-14349-00	Pipe	1	1	1	1	1	1
28	-	5H0-14589-00	Spring	1	1	1	1	1	1
29	-	5H0-14918-00	Ring	1	1	1	1	1	1
30	-	97901-03108	Screw, with washer	2	2	2	2	2	2

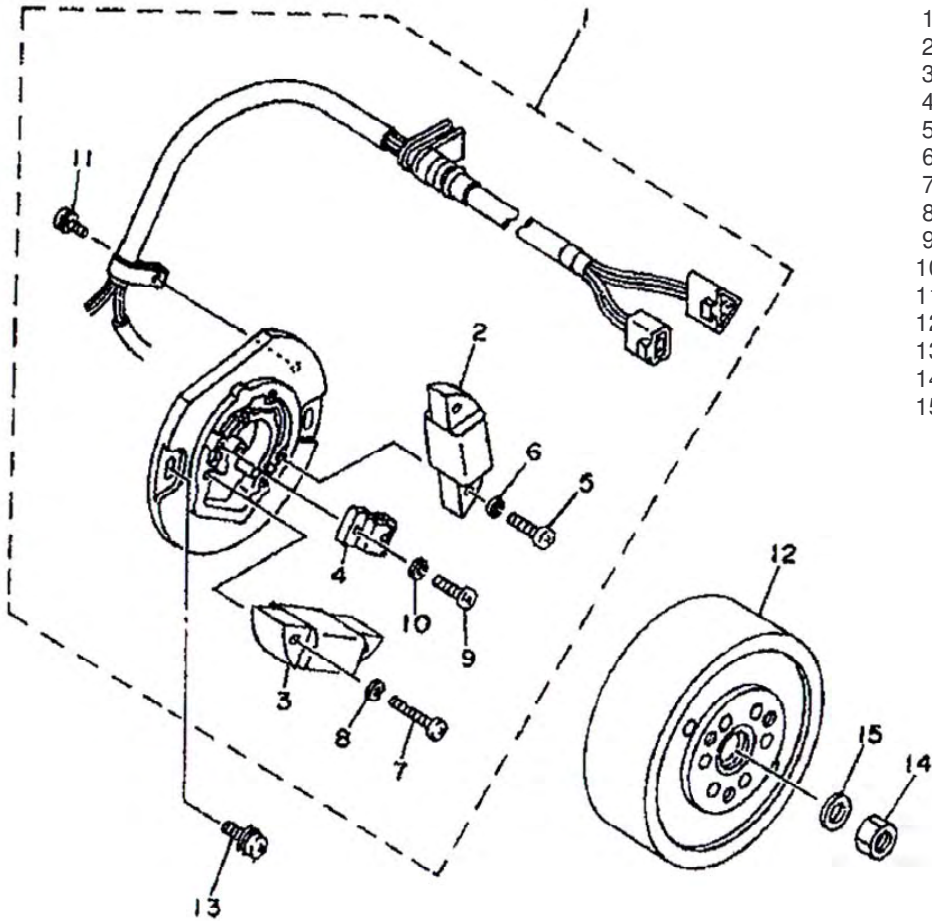

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-85510-00	Stator assy	1	1	1	1	1	1
2	-	4GG-85512-00	Coil, source	1	1	1	1	1	1
3	-	4GG-85513-00	Coil, lighting 1	1	1	1	1	1	1
4	-	4GG-85580-00	Coil, pulser	1	1	1	1	1	1
5	-	98507-05017	Screw, pan head	2	2	2	2	2	2
6	-	92990-05100	Washer, spring	2	2	2	2	2	2
7	-	98507-05040	Screw, pan head	2	2	2	2	2	2
8	-	92990-05100	Washer, spring	2	2	2	2	2	2
9	-	98507-04018	Screw, pan head	2	2	2	2	2	2
10	-	92990-04100	Washer, spring	2	2	2	2	2	2
11	-	97602-04108	Screw, pan head with washer	1	1	1	1	1	1
12	-	4GG-85550-00	Rotor assy	1	1	1	1	1	1
13	-	90149-06011	Screw	2	2	2	2	2	2
14	-	90179-12657	Nut	1	1	1	1	1	1
15	-	90201-123L6	Washer, plate	1	1	1	1	1	1



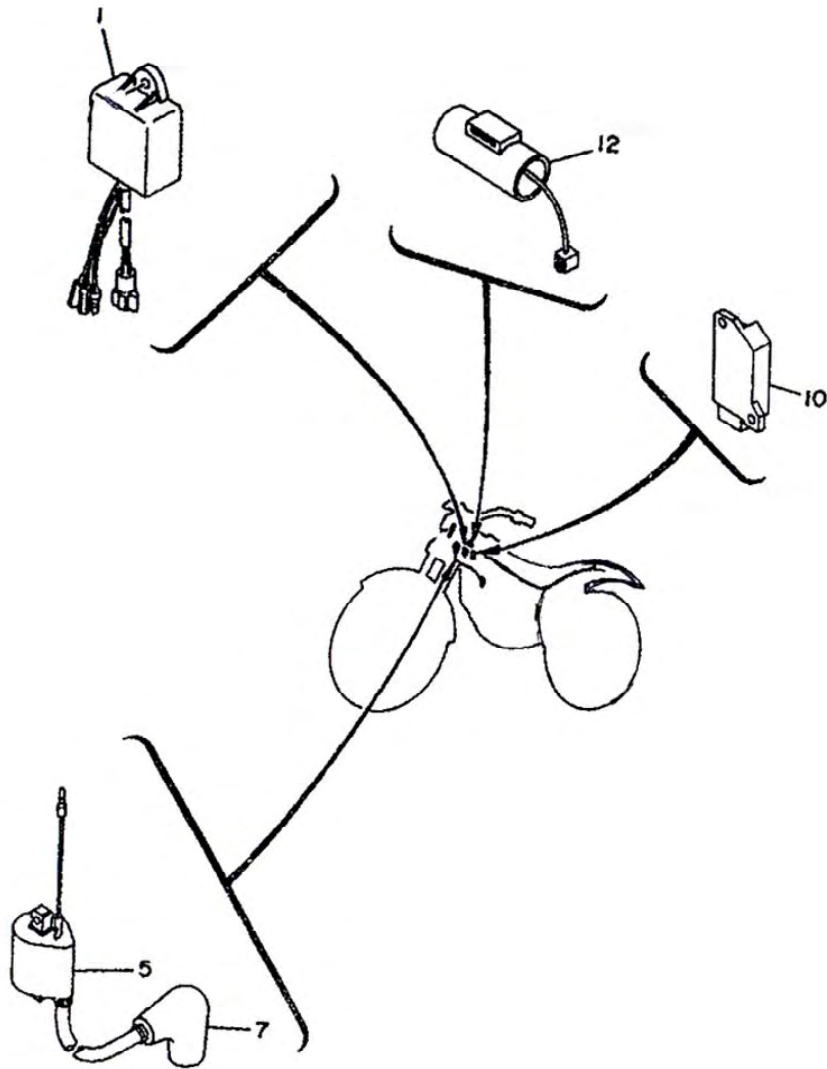

Item	Assembly	Part Number	Description	SY				LR	
				01	02	03	04	03	04
1	-	4GG-85540-00	C.D.I. unit assy	1	1	1	1	1	1
5	-	4GG-82310-10	Ignition coil assy	1	1	1	1	1	1
7	-	8DG-82370-00	Plug cap assy	1	1	1	1	1	1
10	-	1JK-81960-A1	Rectifier & regulator assy	1	1	1	1	1	1
12	-	1NL-81965-01	Condenser, smoothing	1	1	1	1	1	1

